


# Sauna "Hobbit Tiny" 4 x 1,95









**NB! Please read whole manual before start.**

**All given measurements are in millimeters!**

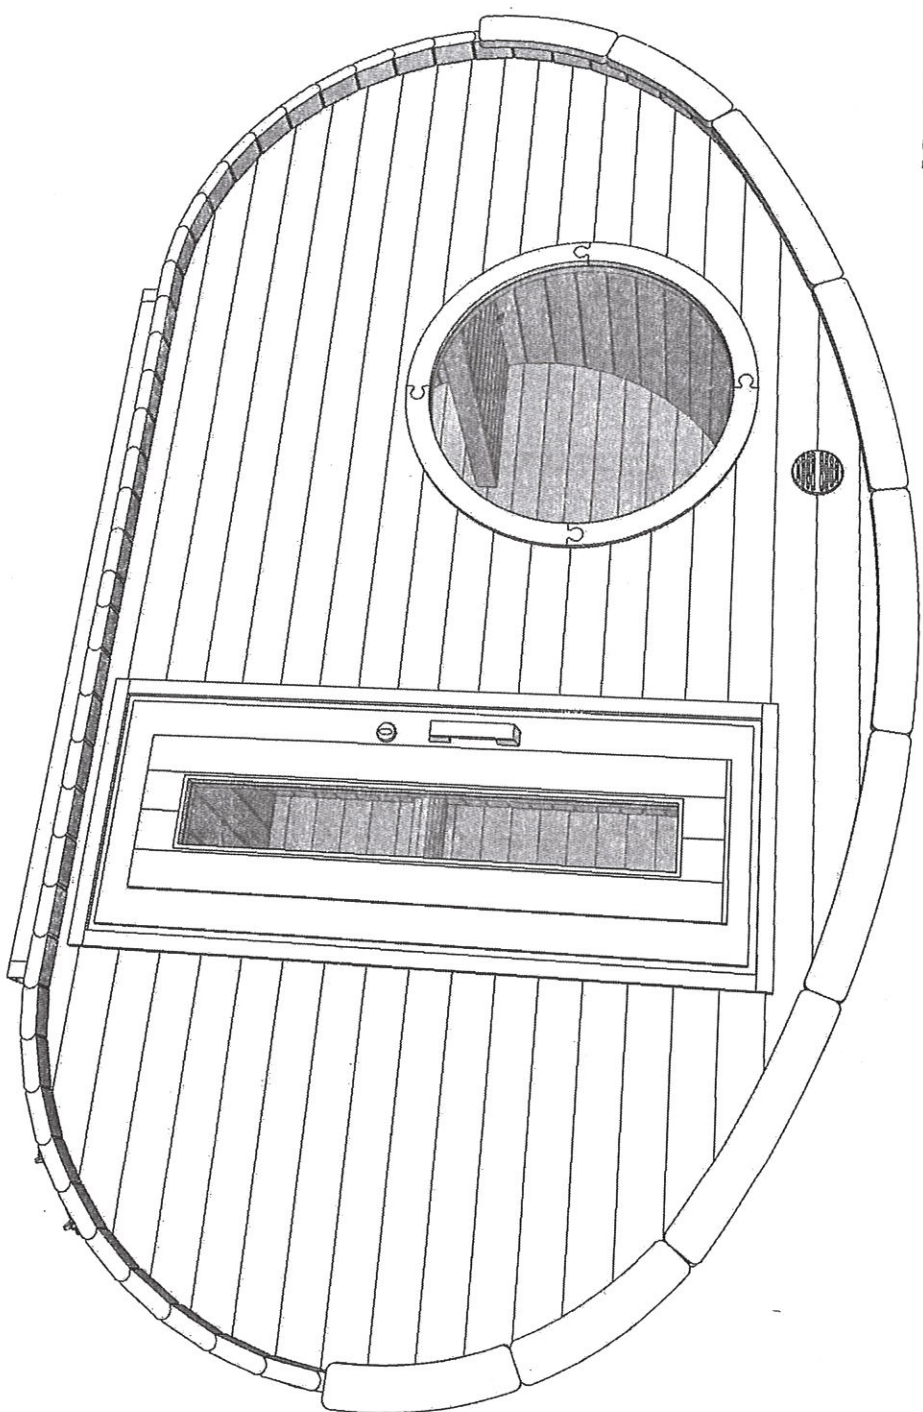


# Sauna "Hobbit" 4 x 1,95

## Details list 1

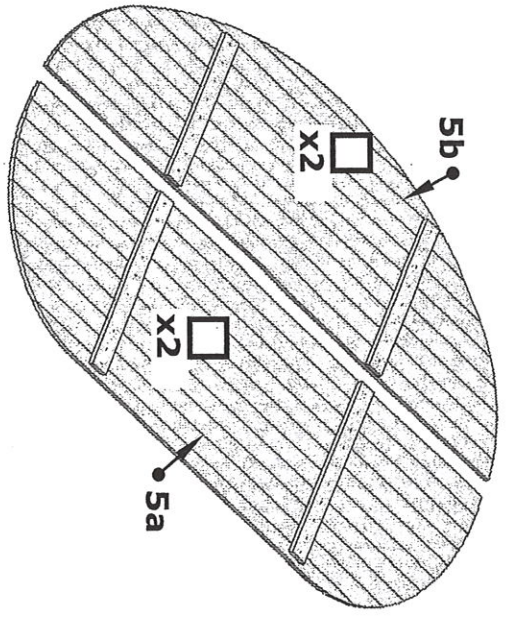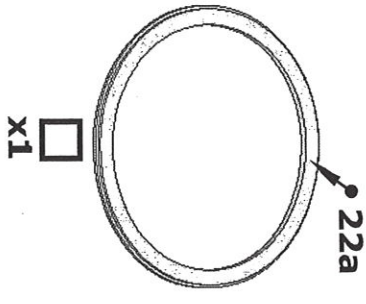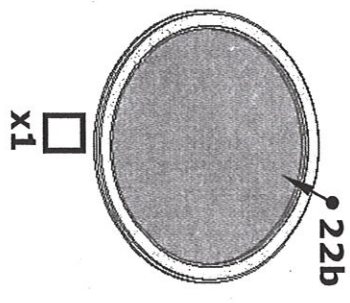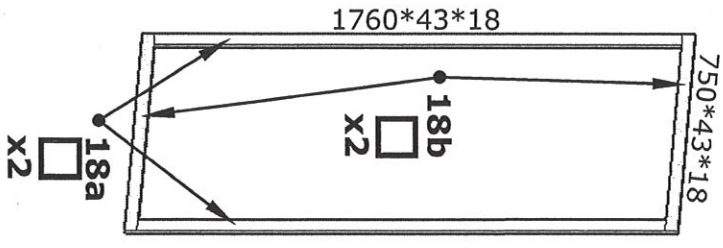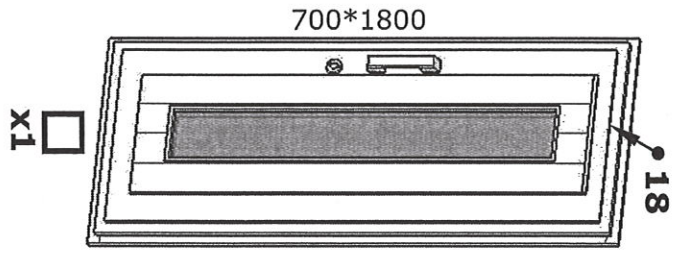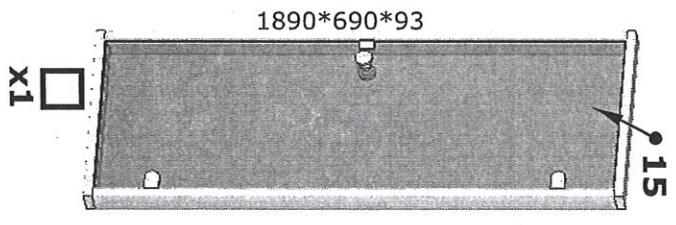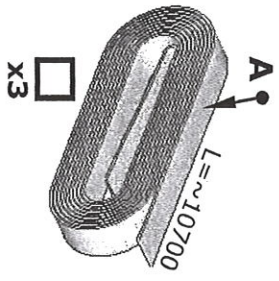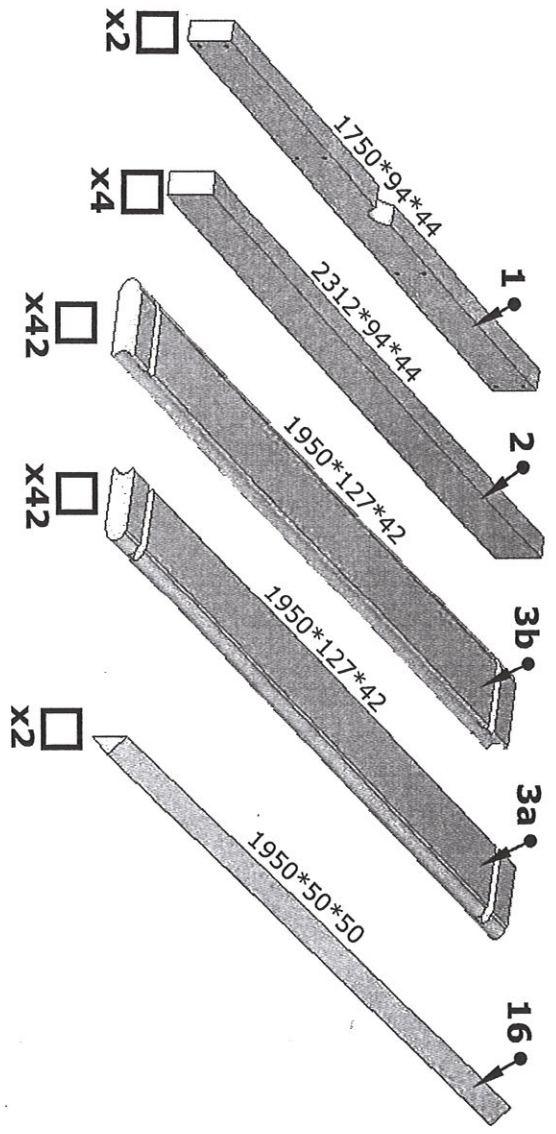












# Sauna "Hobbit" 4 x 1,95

## Details list 2



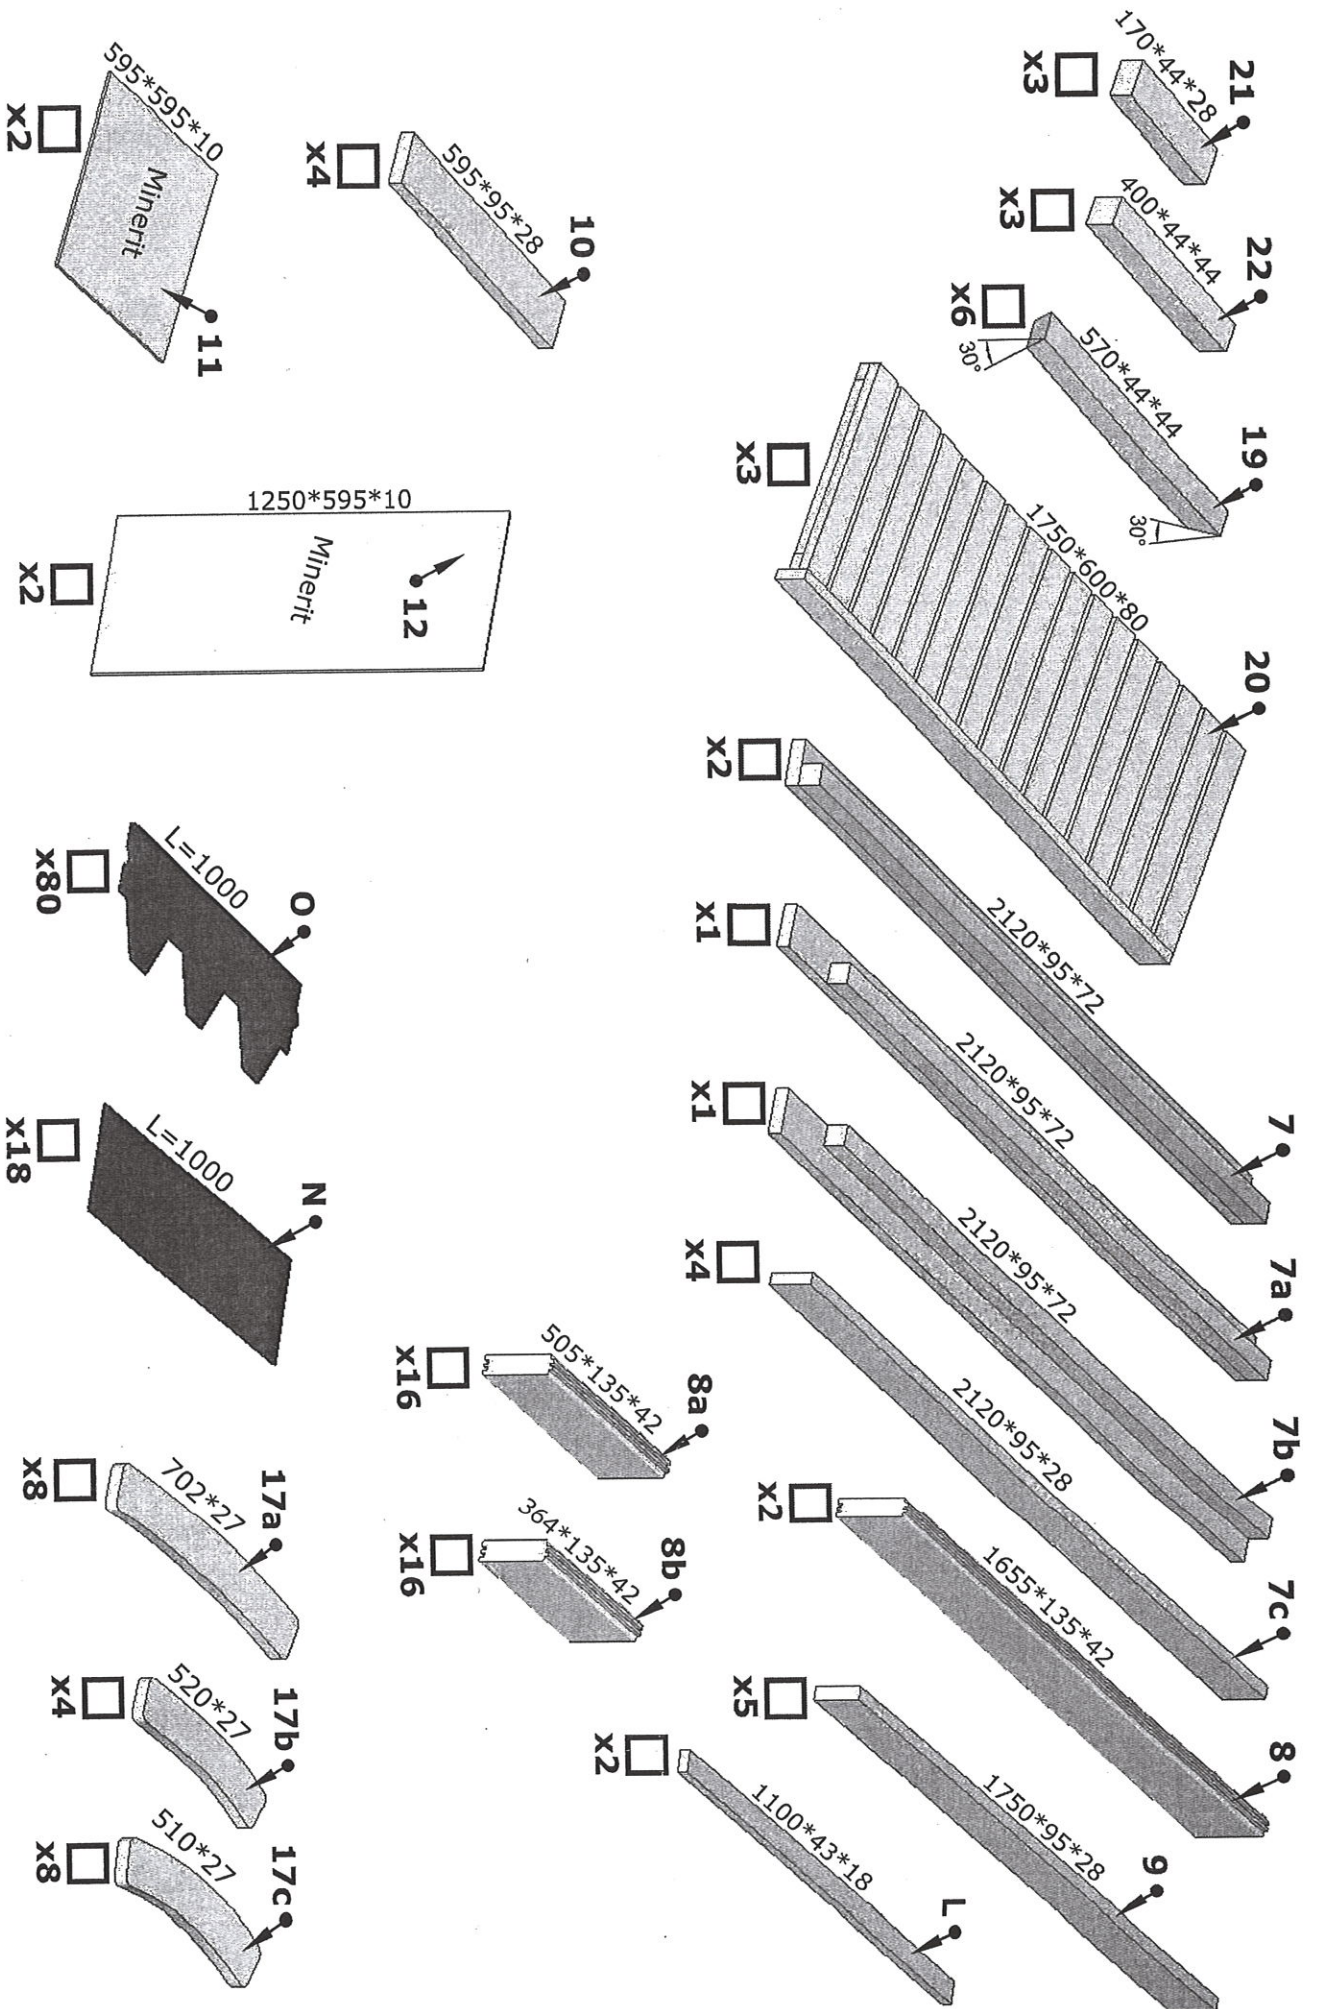


# Sauna "Hobbit" 4 x 1,95

## Details list(in the box)

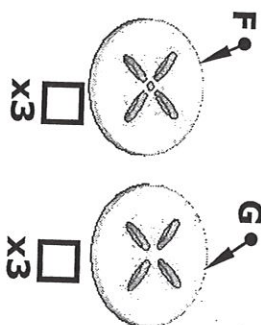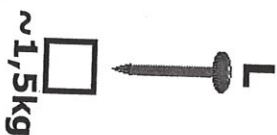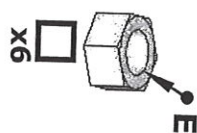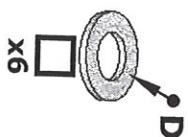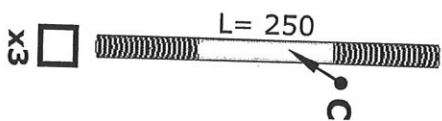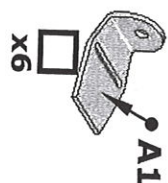
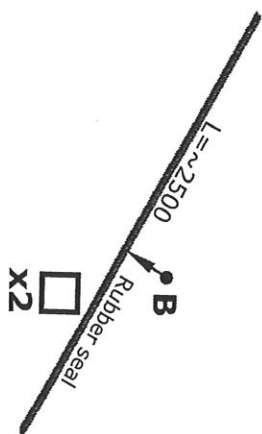


# Sauna "Hobbit" 4 x 1,95

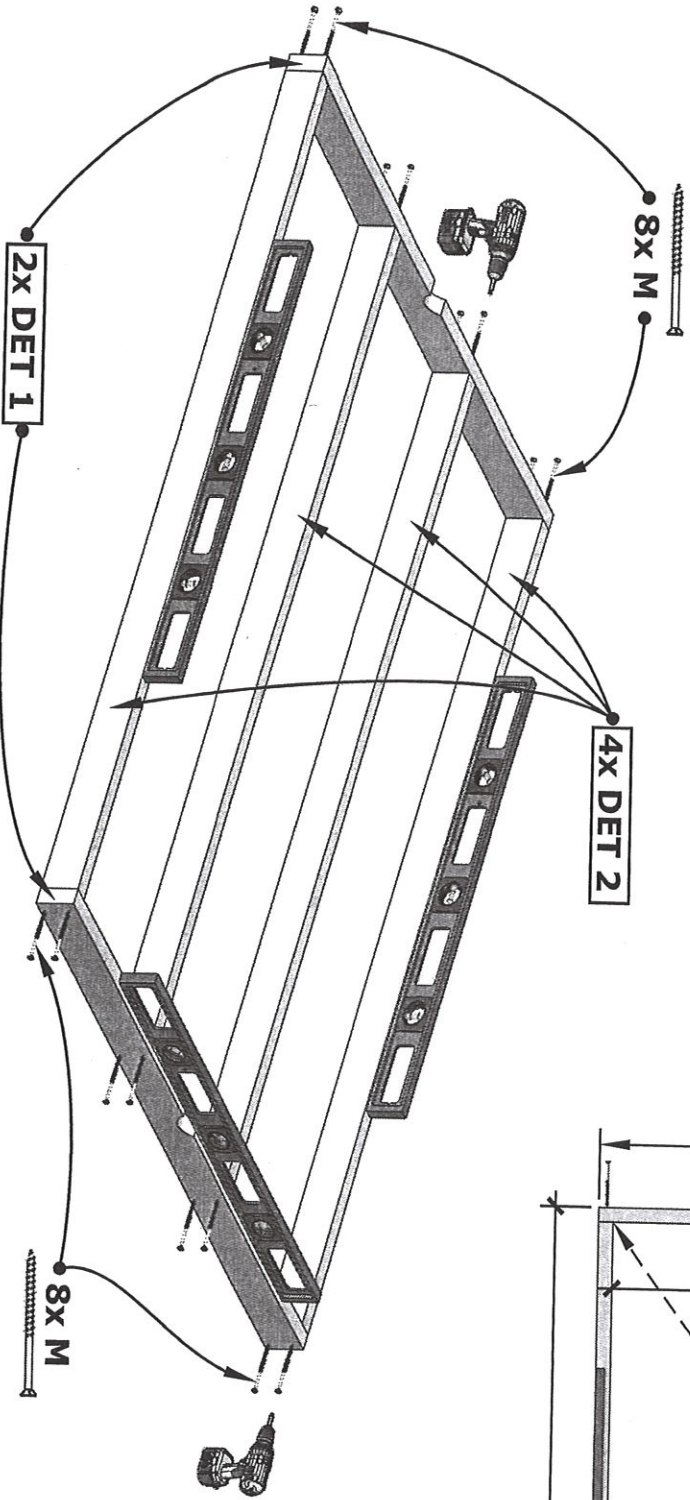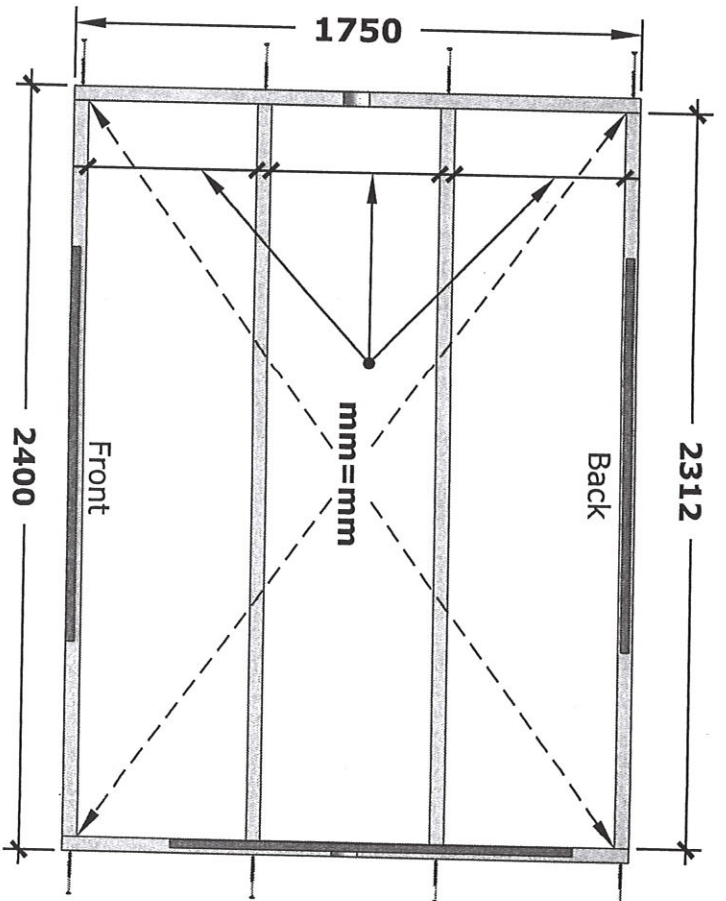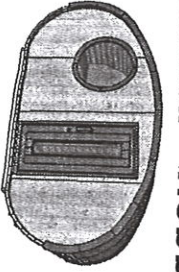


1.





# Sauna "Hobbit" 4 x 1,95

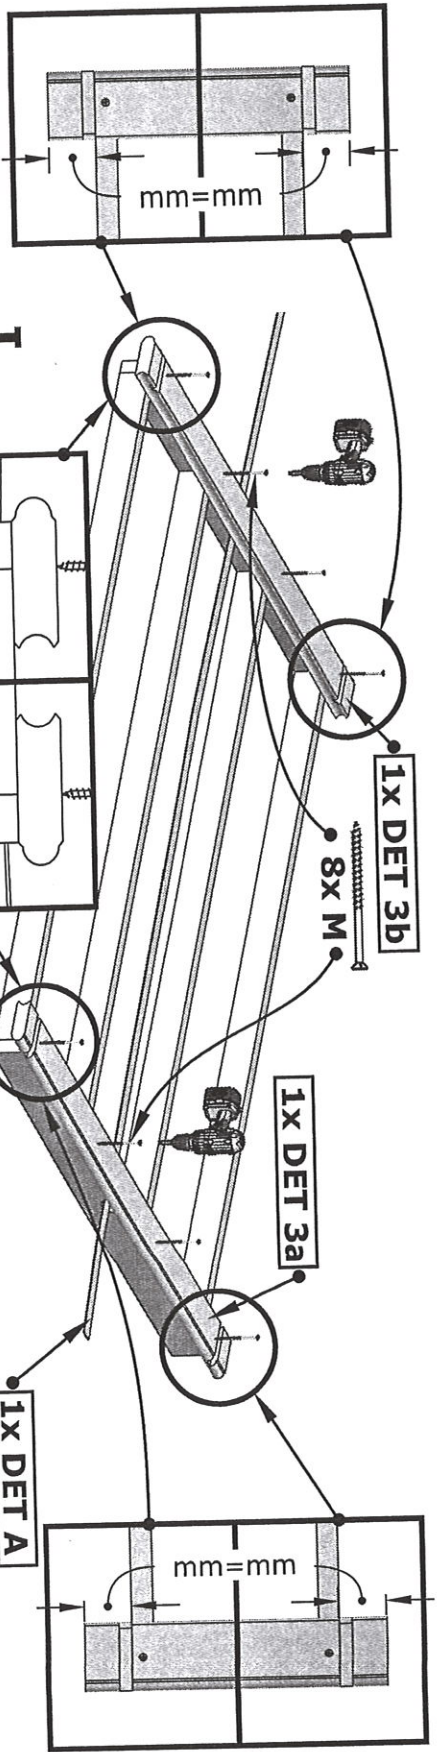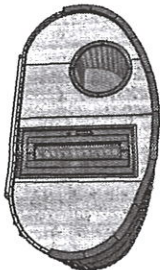


Fix screws over one board, diagonally in every board!

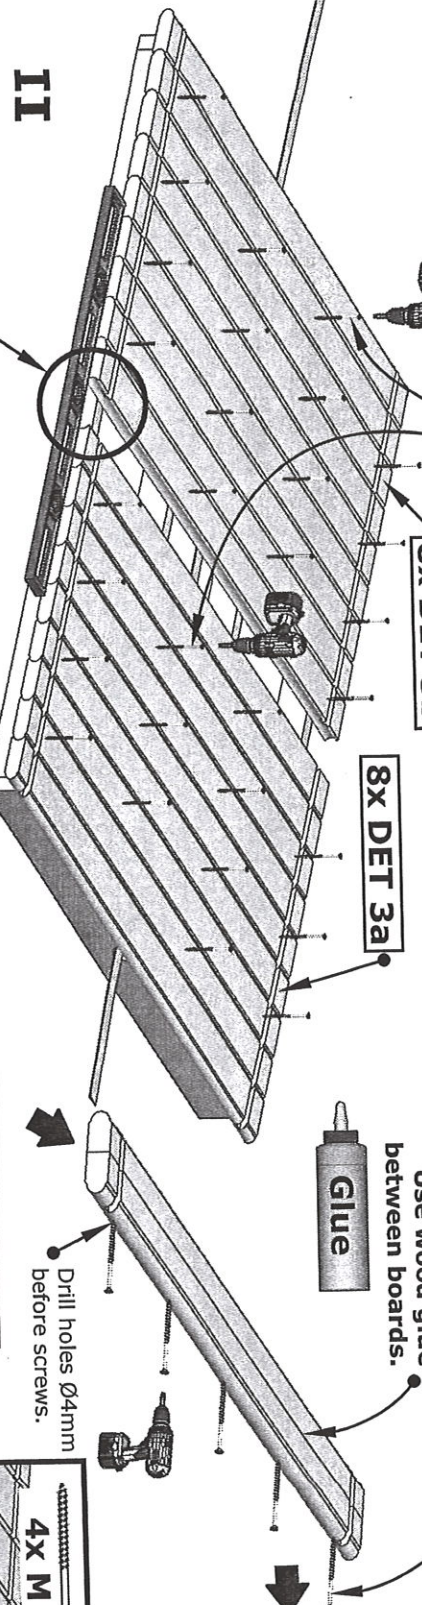


## II

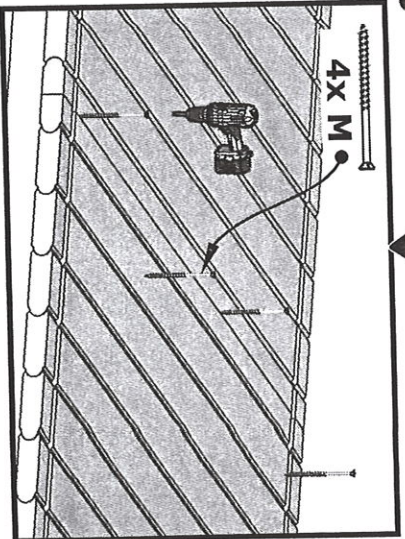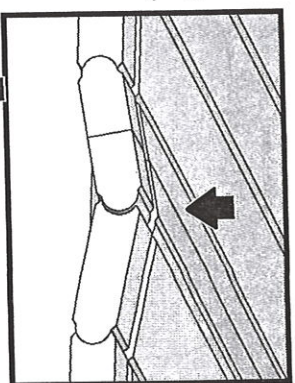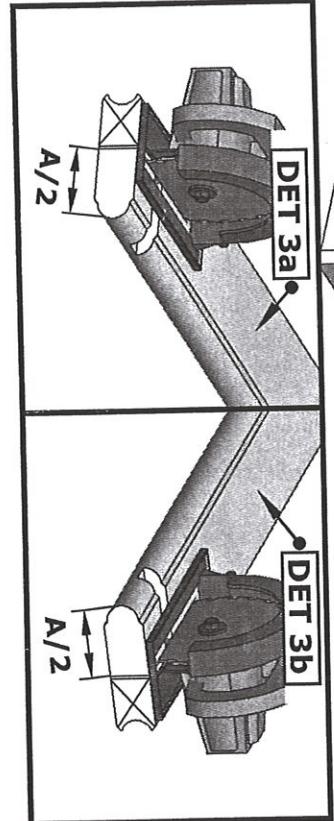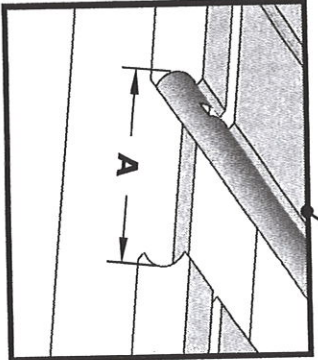




# Sauna "Hobbit" 4 x 1,95

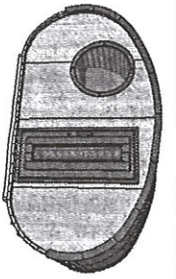

Drill Holes  $\varnothing 10$  in every board, outside.

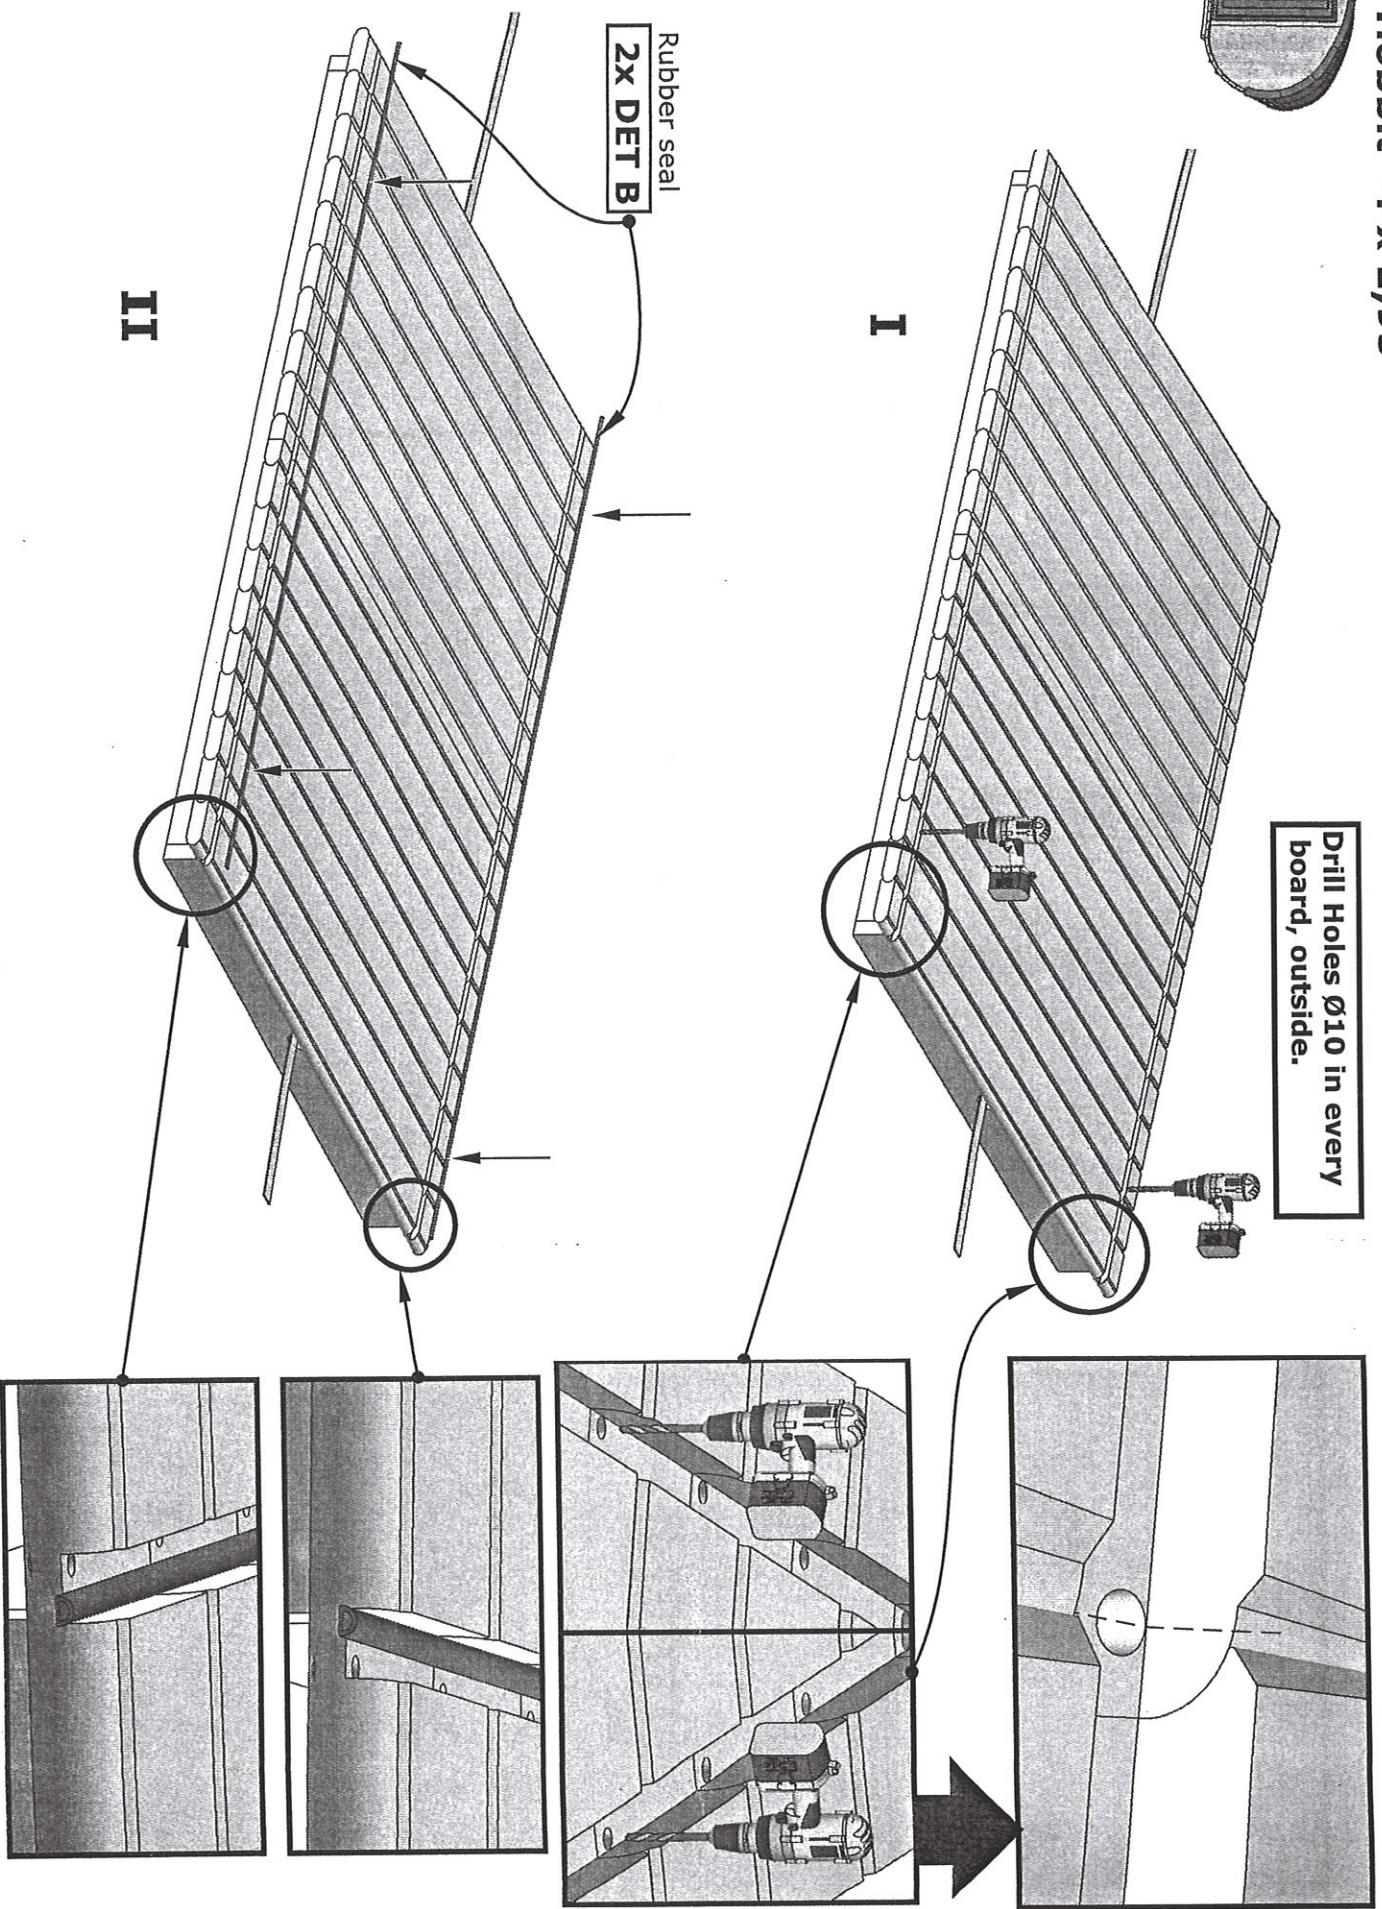

# Sauna "Hobbit Tiny" 4 x 1,95

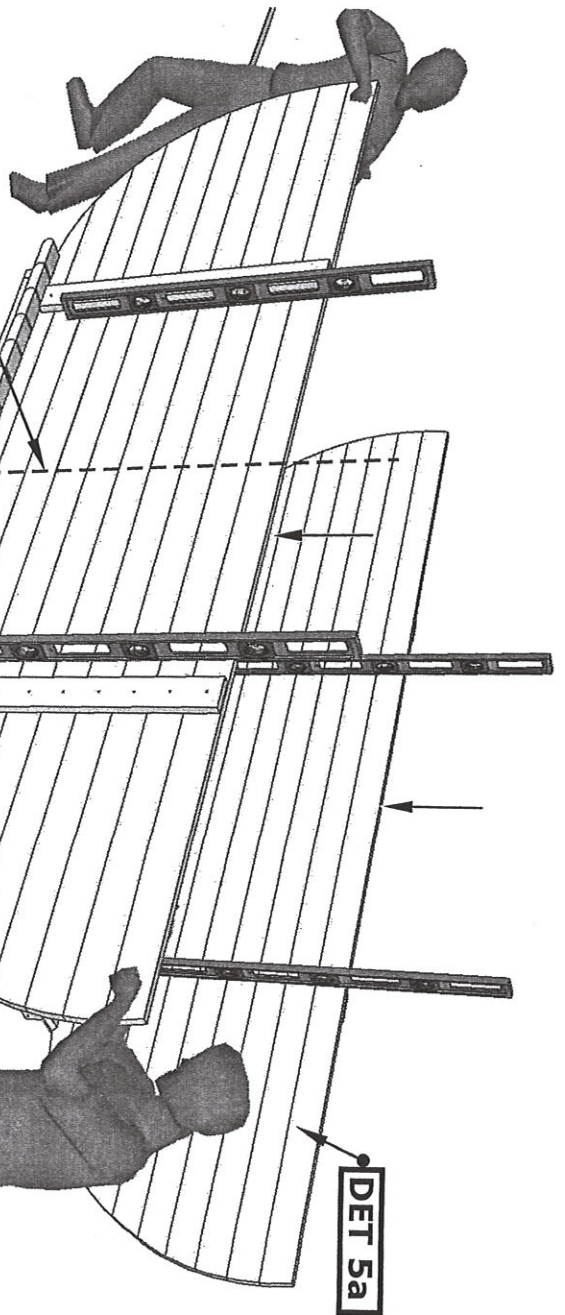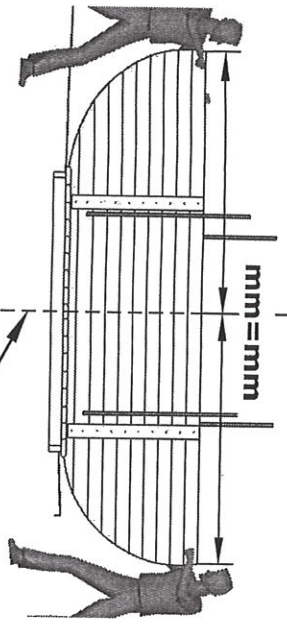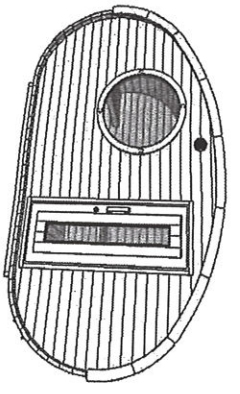

Wall and floor midpoint.



II

2X DET B

DET 5a


DET 5a

I

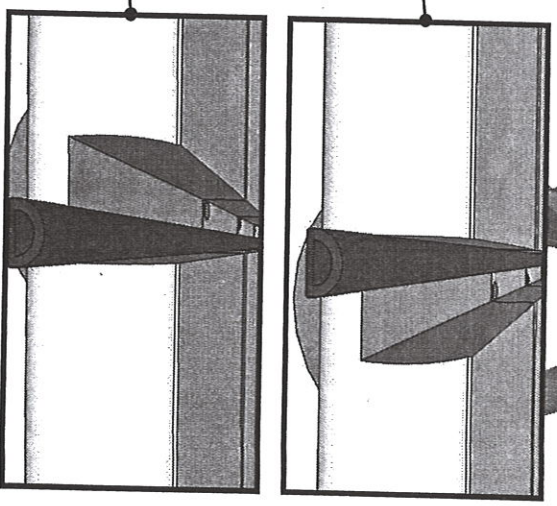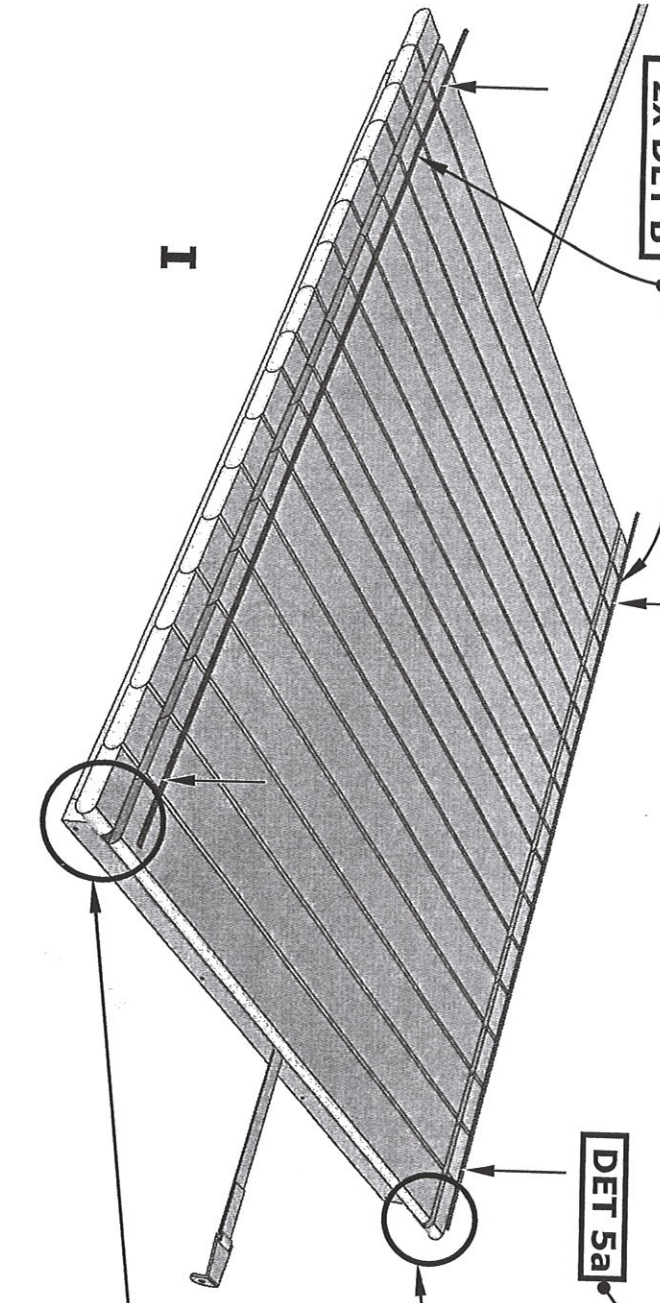








# Sauna "Hobbit Tiny" 4 x 1,95

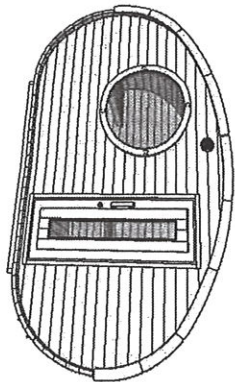



**NB!** Cut some boards from pallet, to support and fix walls if necessary!

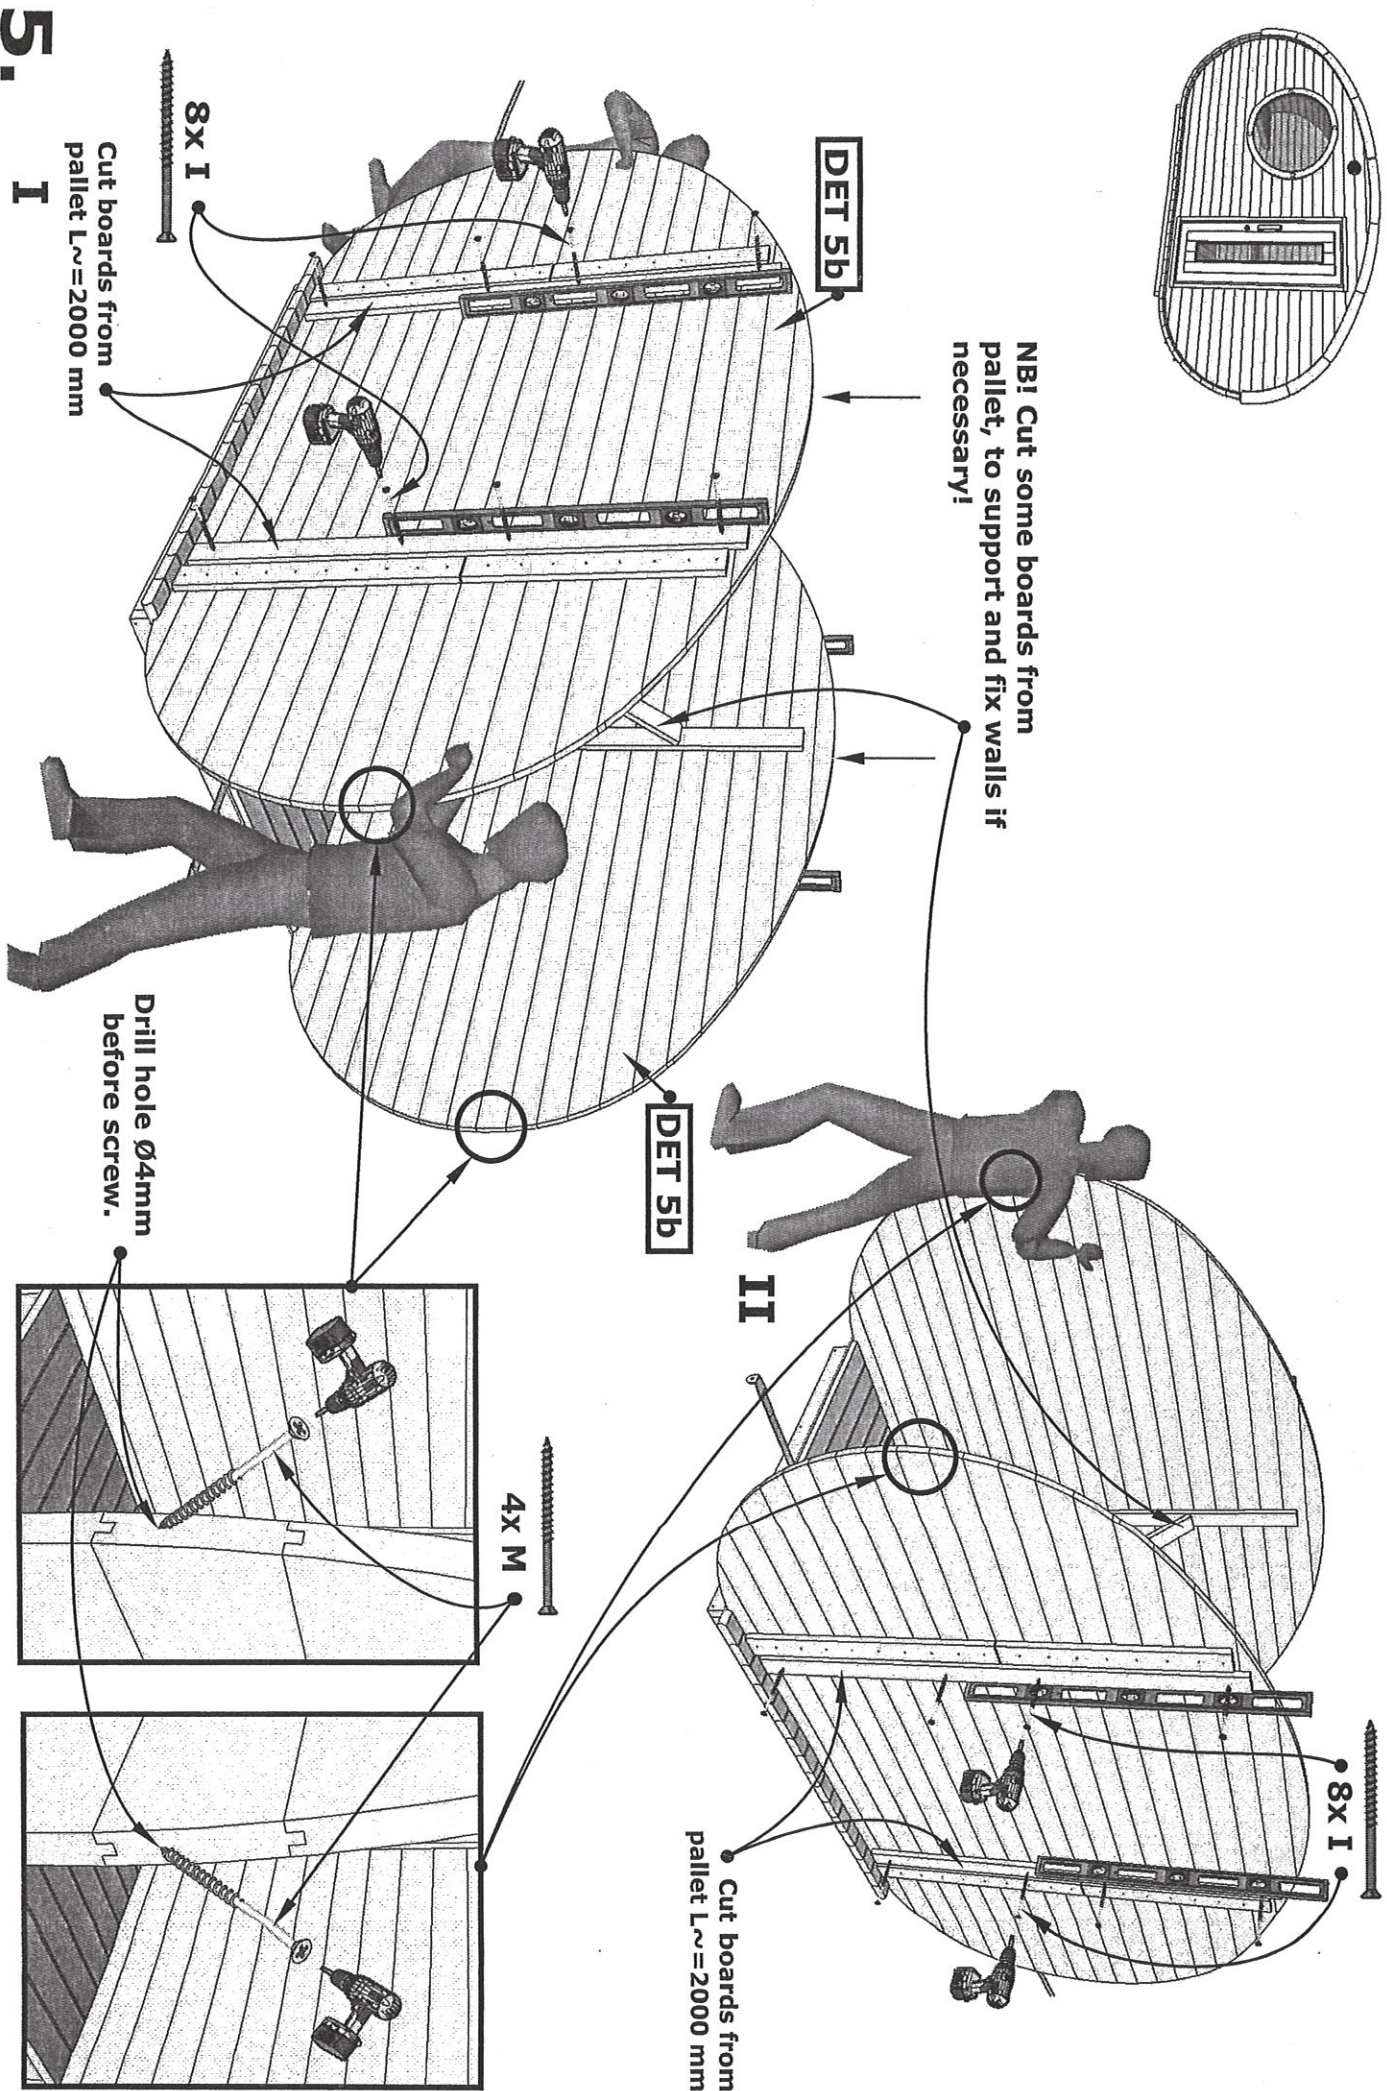

# Sauna "Hobbit" 4 x 1,95



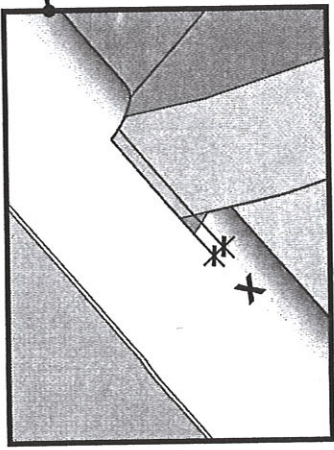
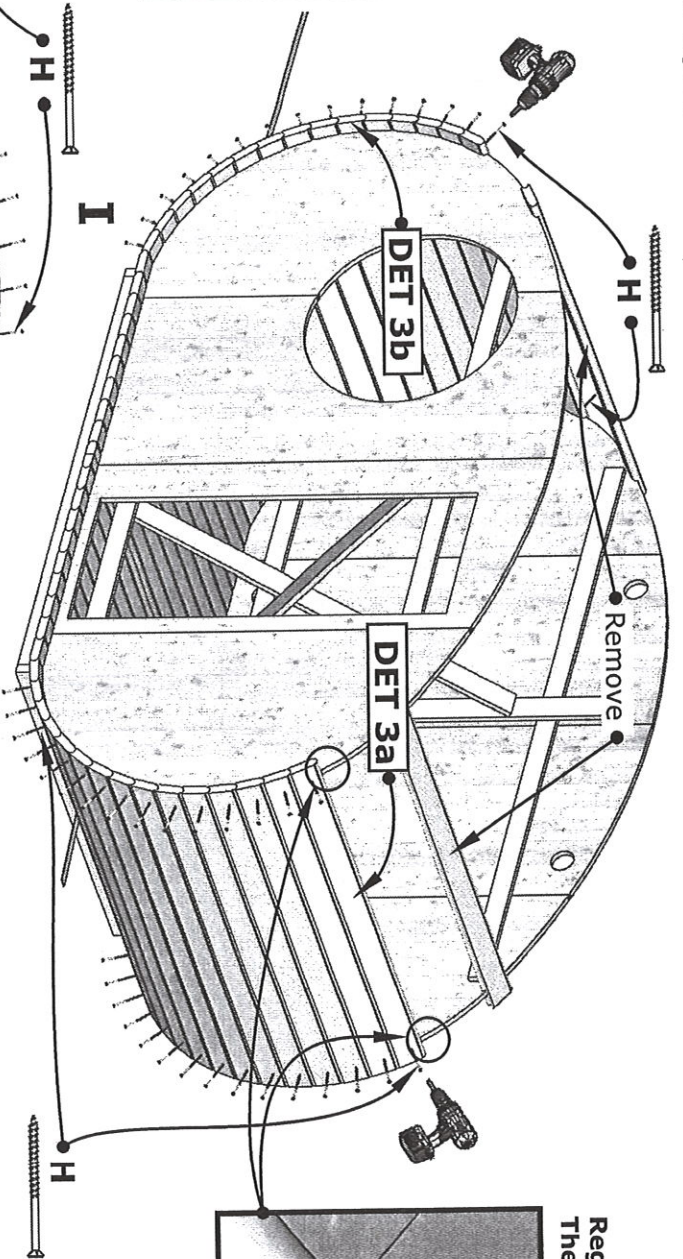
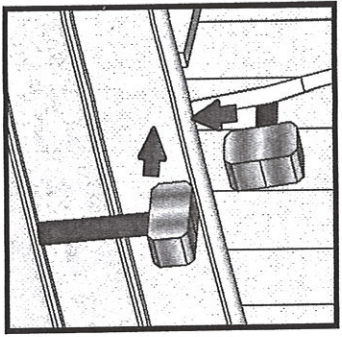
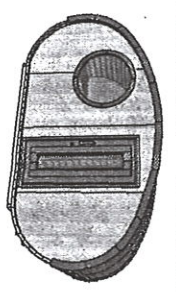


Regular wood X = 7-8 mm.  
Thermo wood X = 3-4 mm.



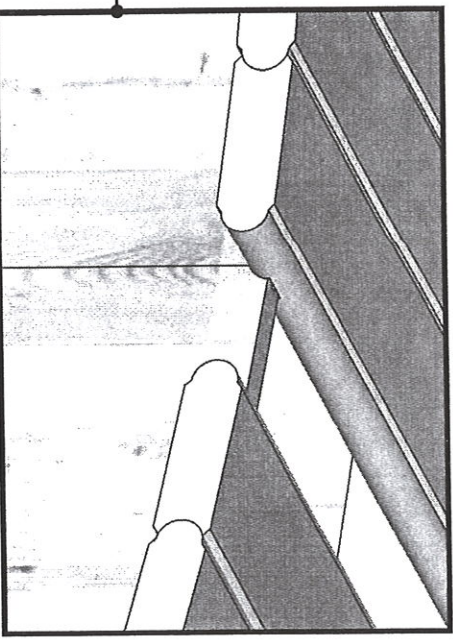
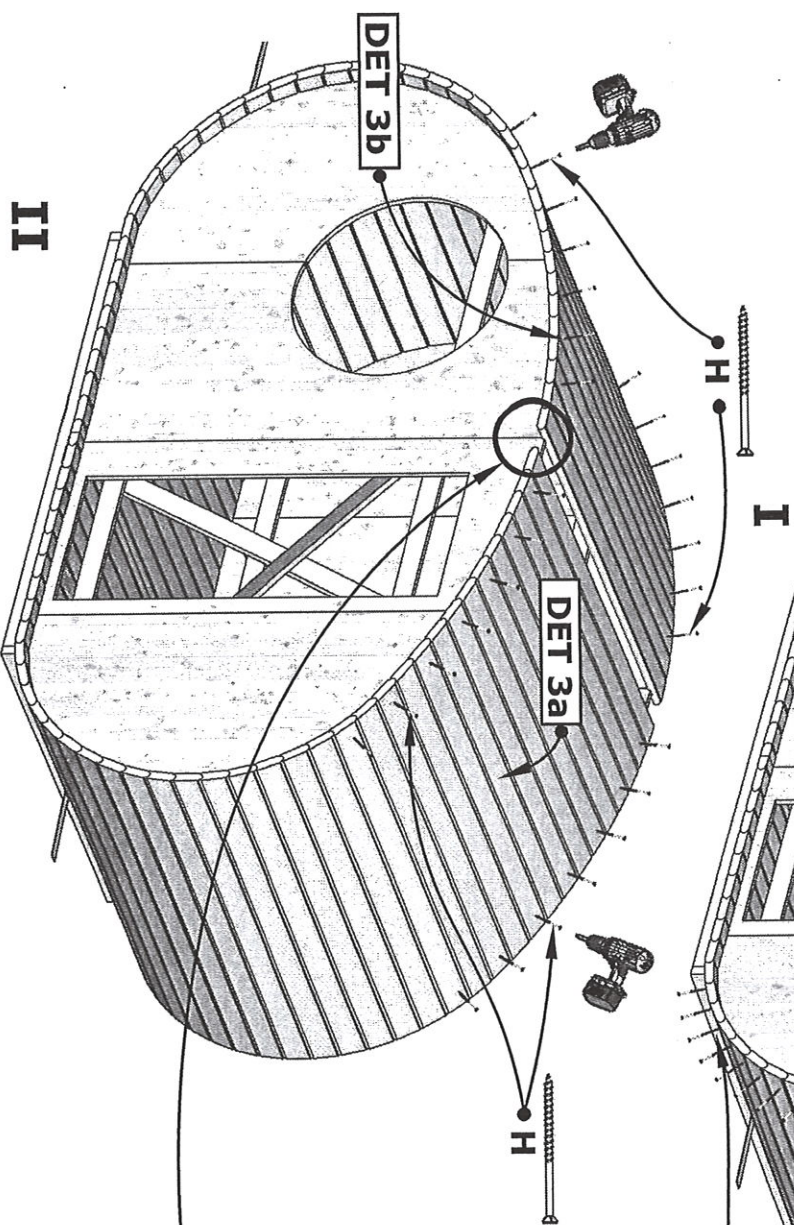


See next page.

# Sauna "Hobbit" 4 x 1,95

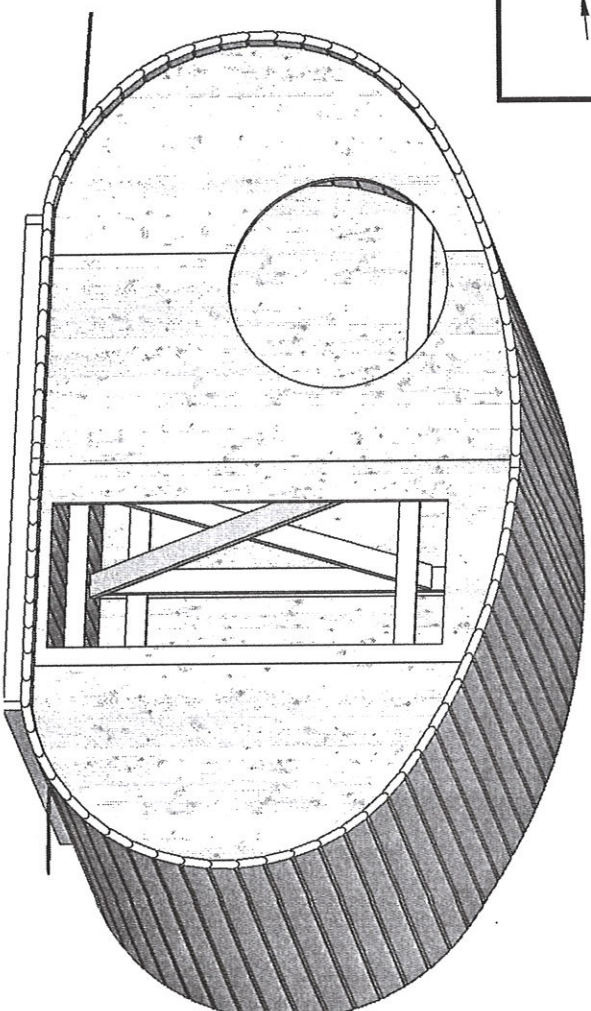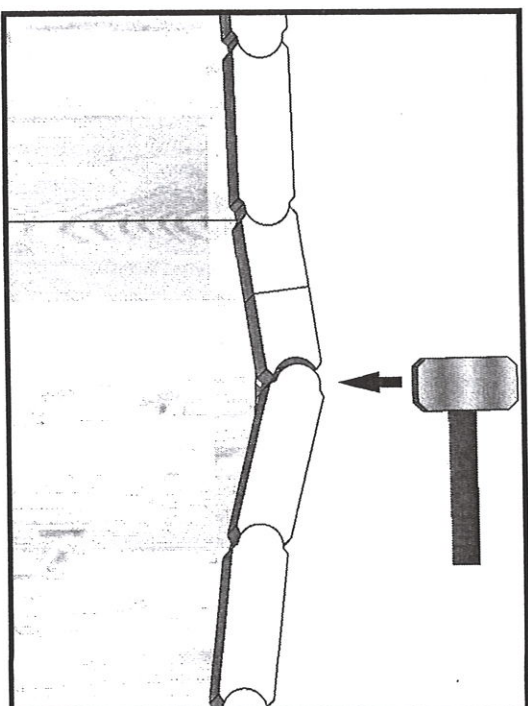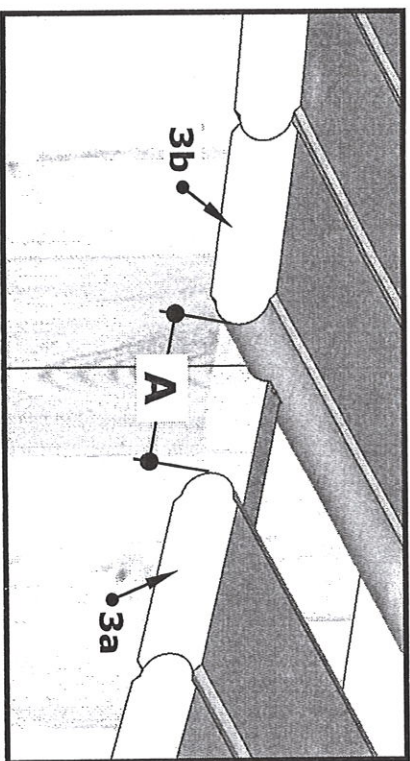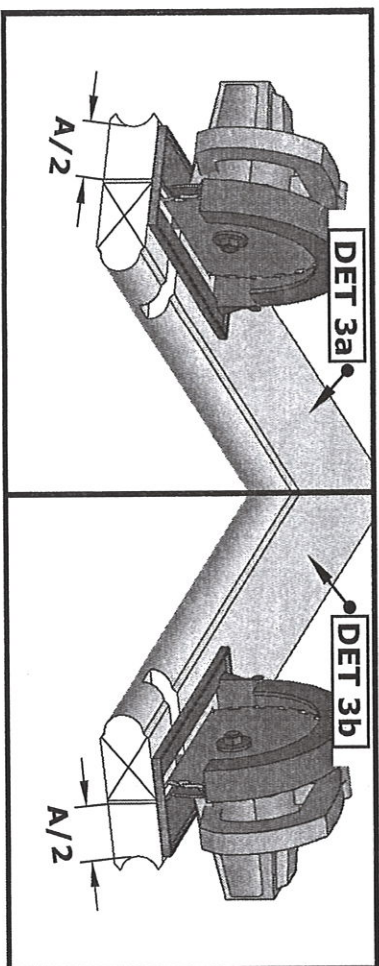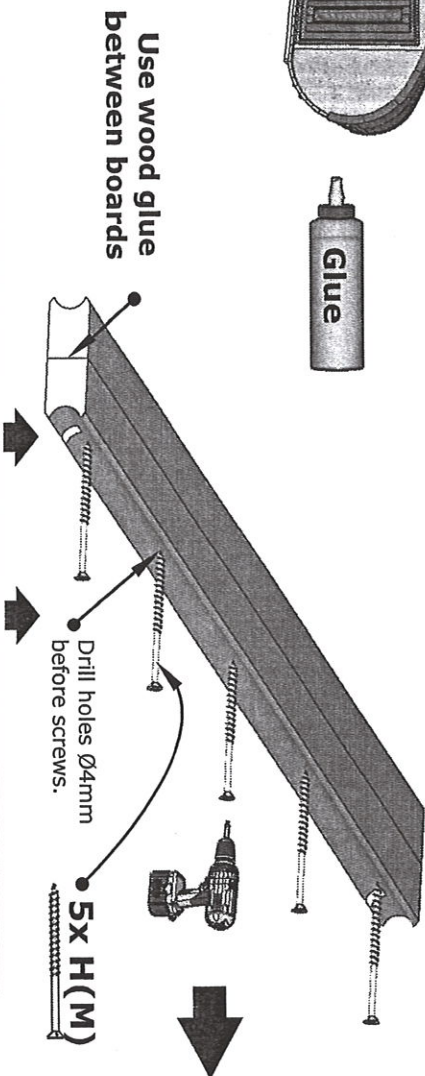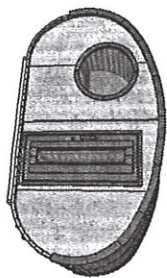

# Sauna "Hobbit" 4 x 1,95

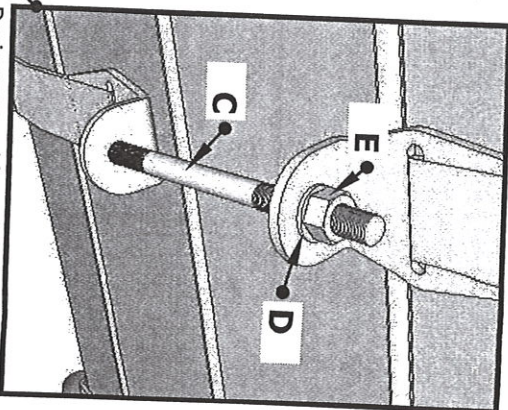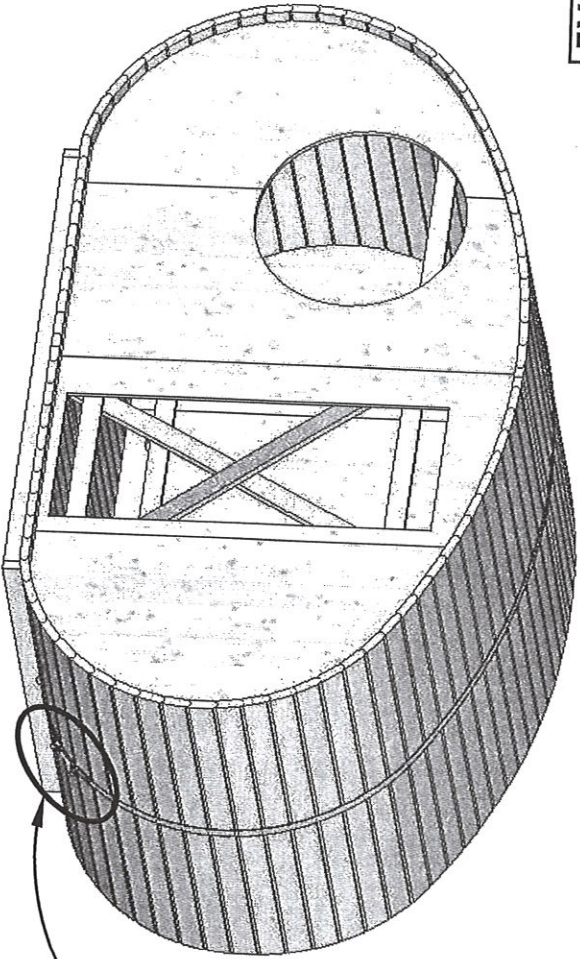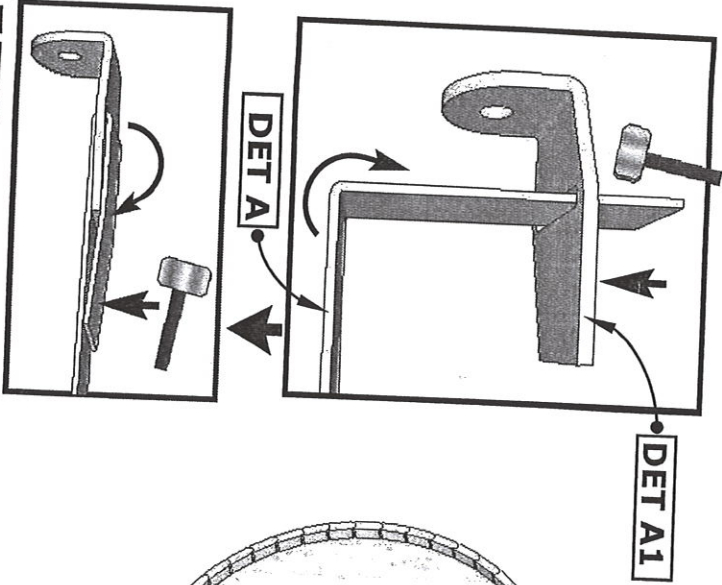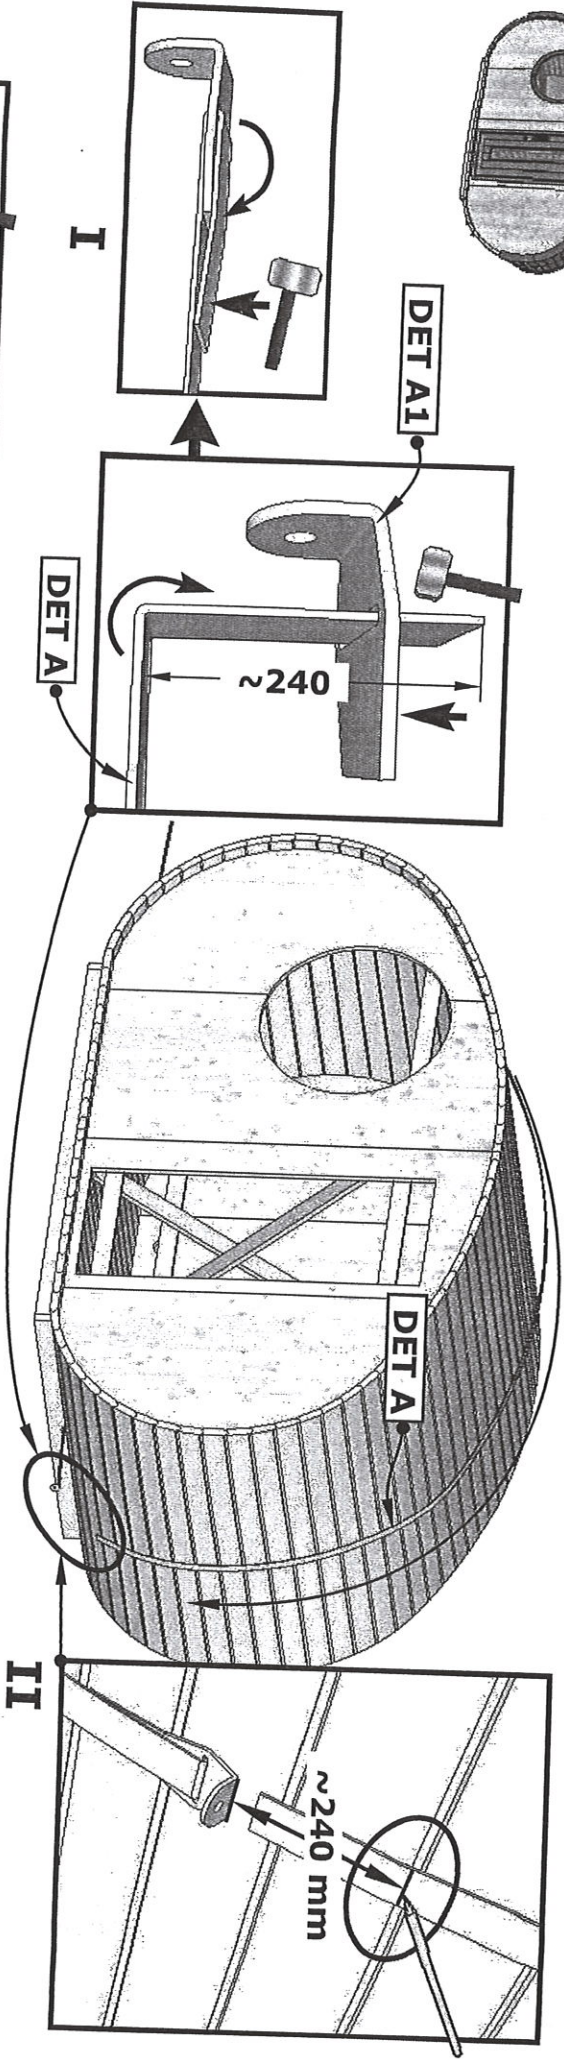





During assembly and retightening the threaded rods, use oil (Würth HPS 1400 or similar) to avoid "cold welding" and it is also easier tightening.



## 8. III

## IV

# Sauna "Hobbit" 4 x 1,95

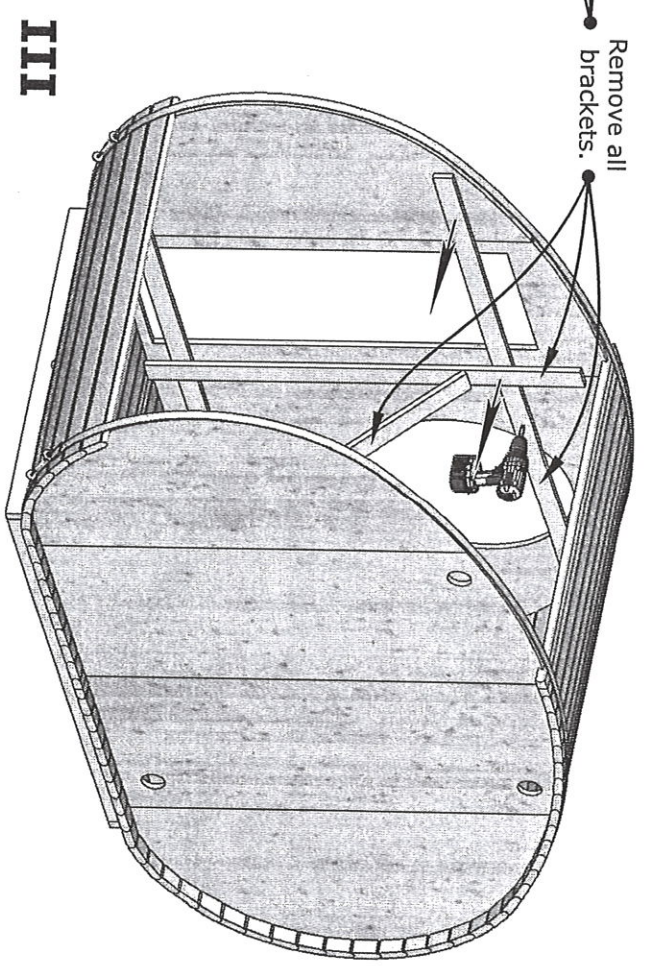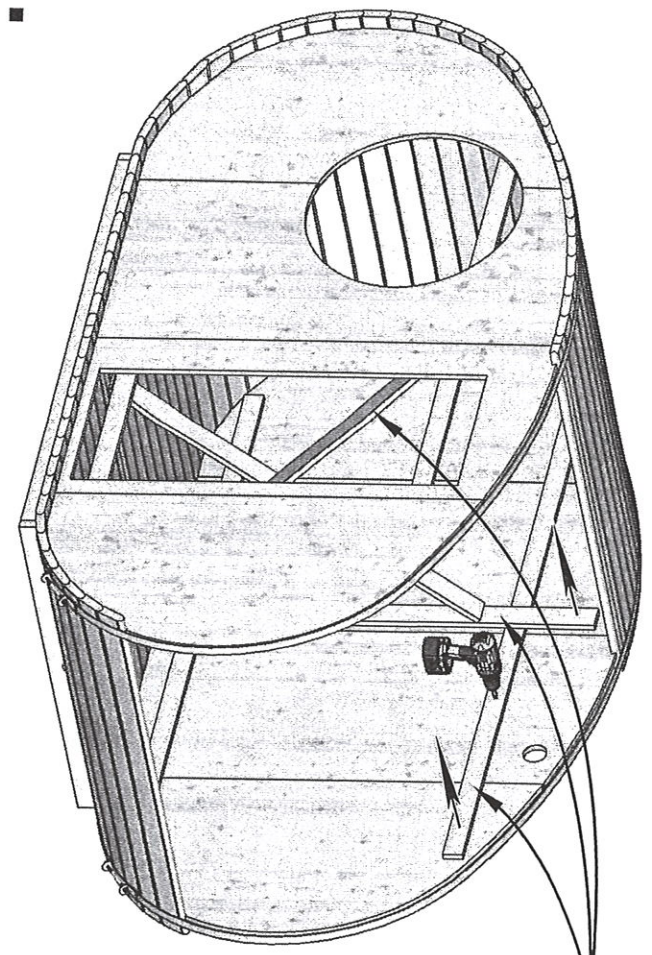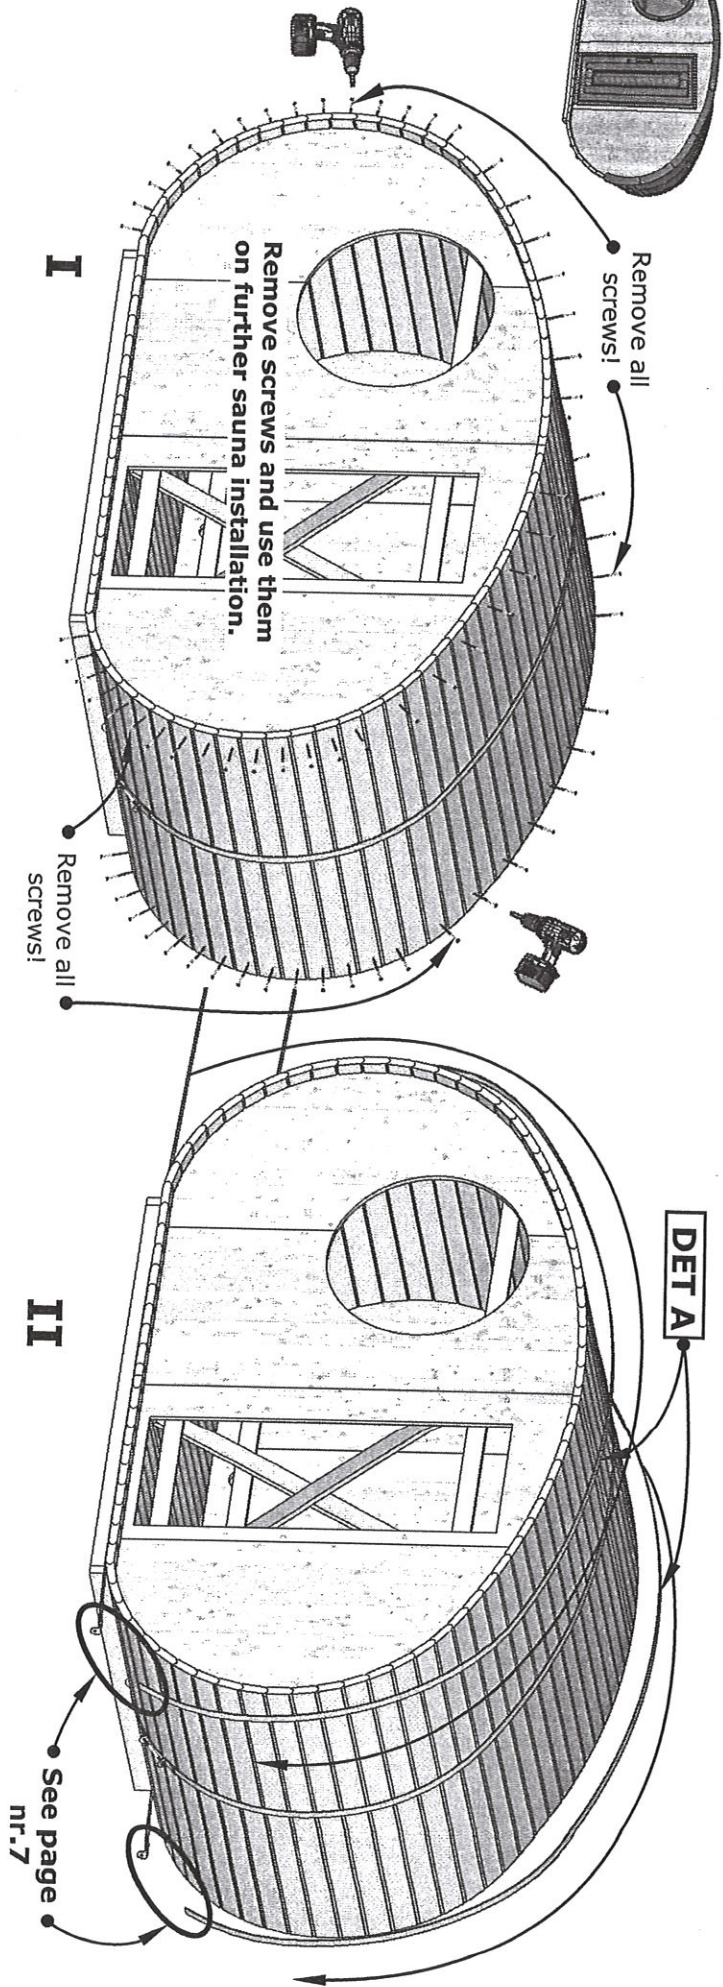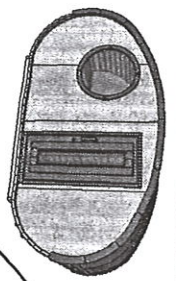


9.


III

Remove all brackets.





# Sauna "Hobbit Tiny" 4 x 1,95

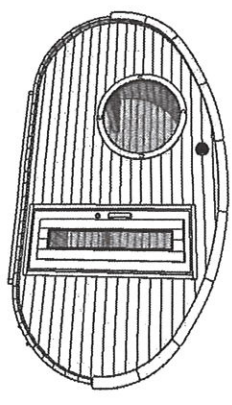


Mark openings and cut out.

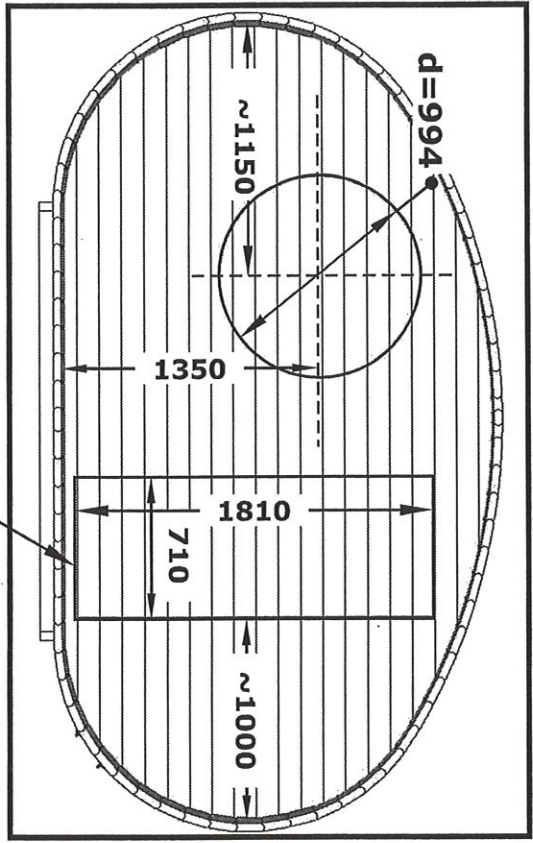


II

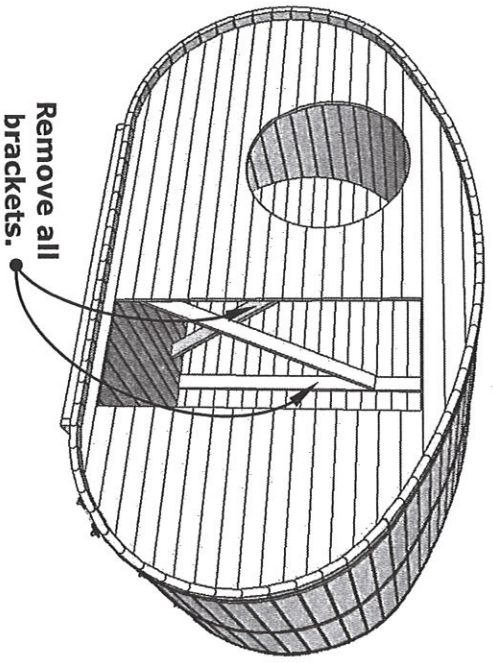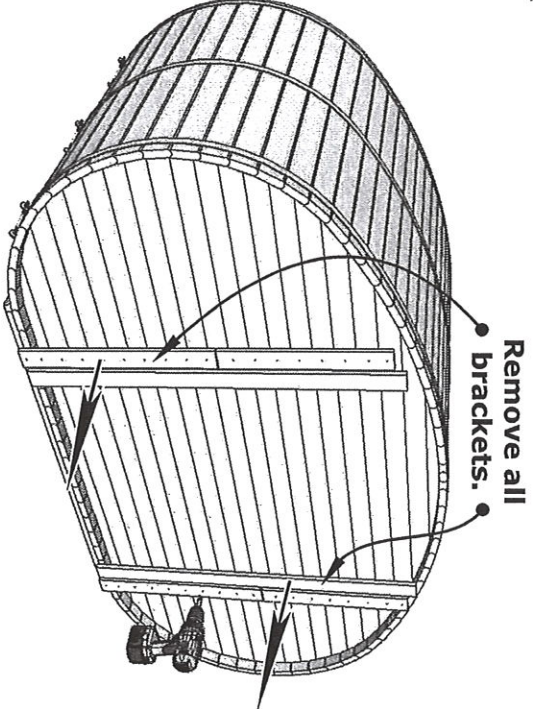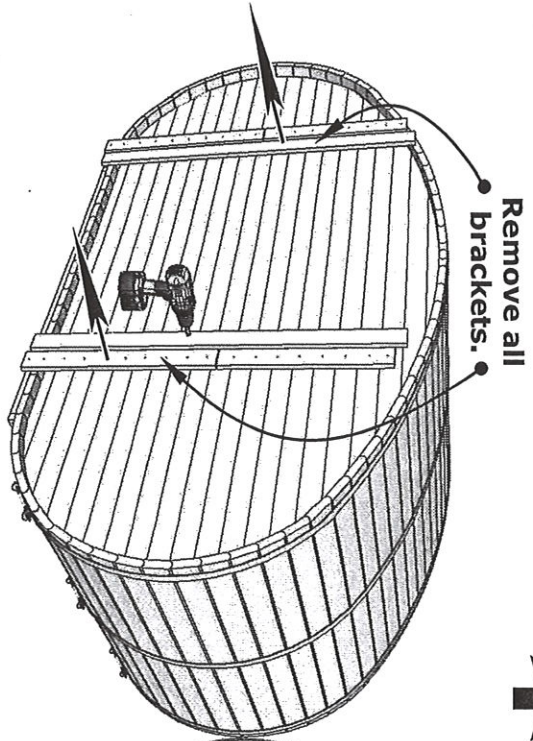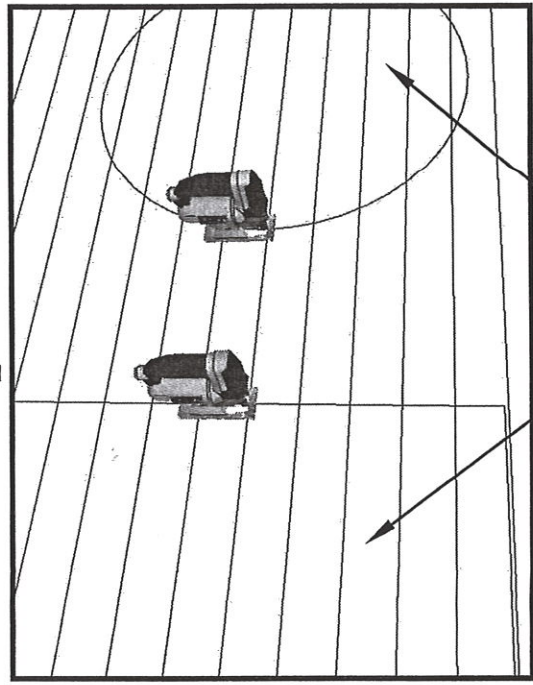



# Sauna "Hobbit Tiny" 4 x 1,95

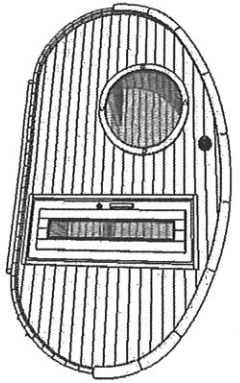


Use waterlevel for installation.  
Place doors and windows from inside.

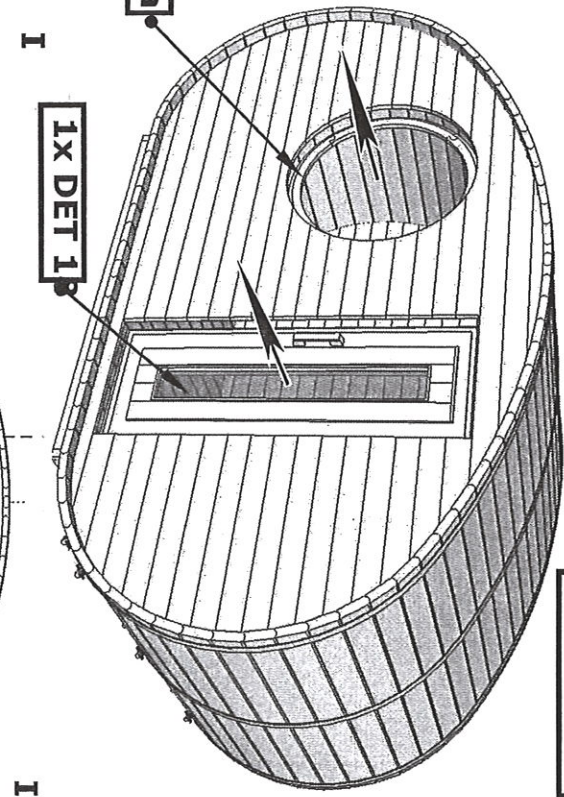

NB! Vertically fix screw in every board.

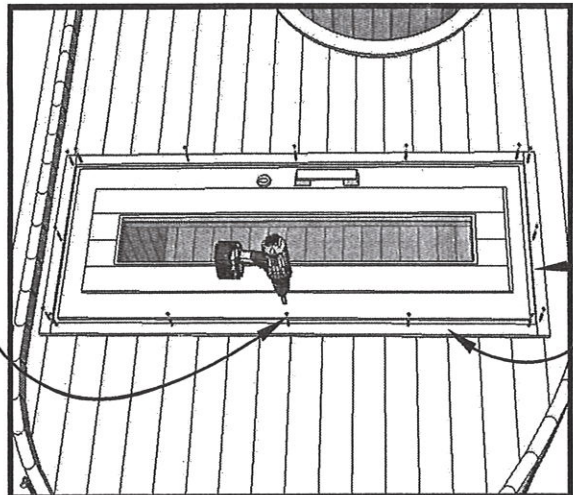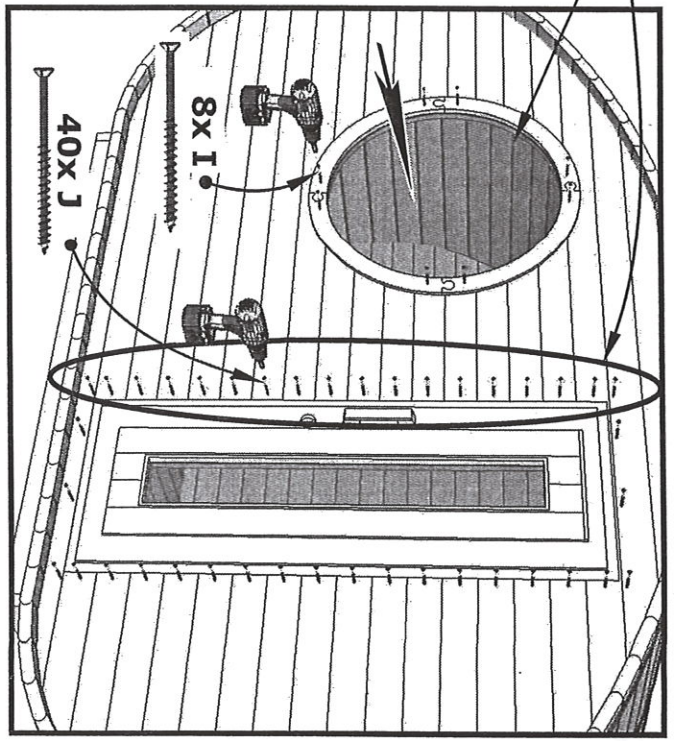

# 11.

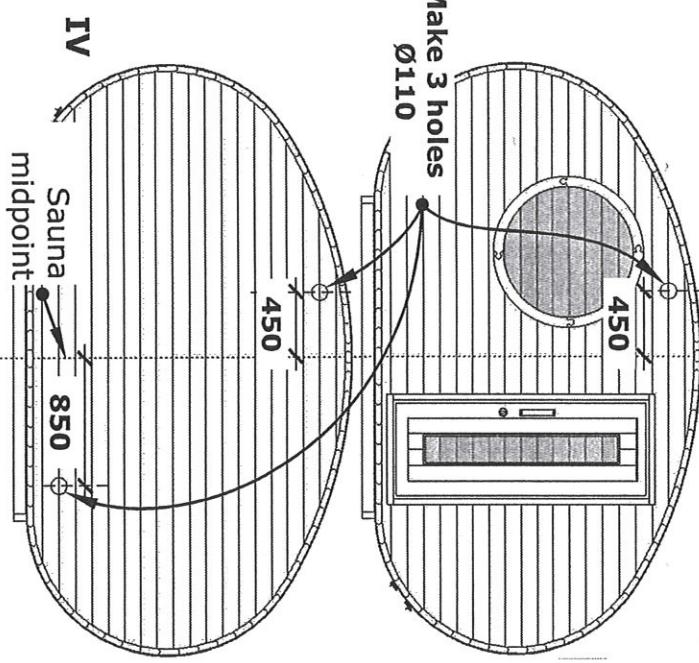




II

IV

III

I

# Sauna "Hobbit" 4 x 1,95



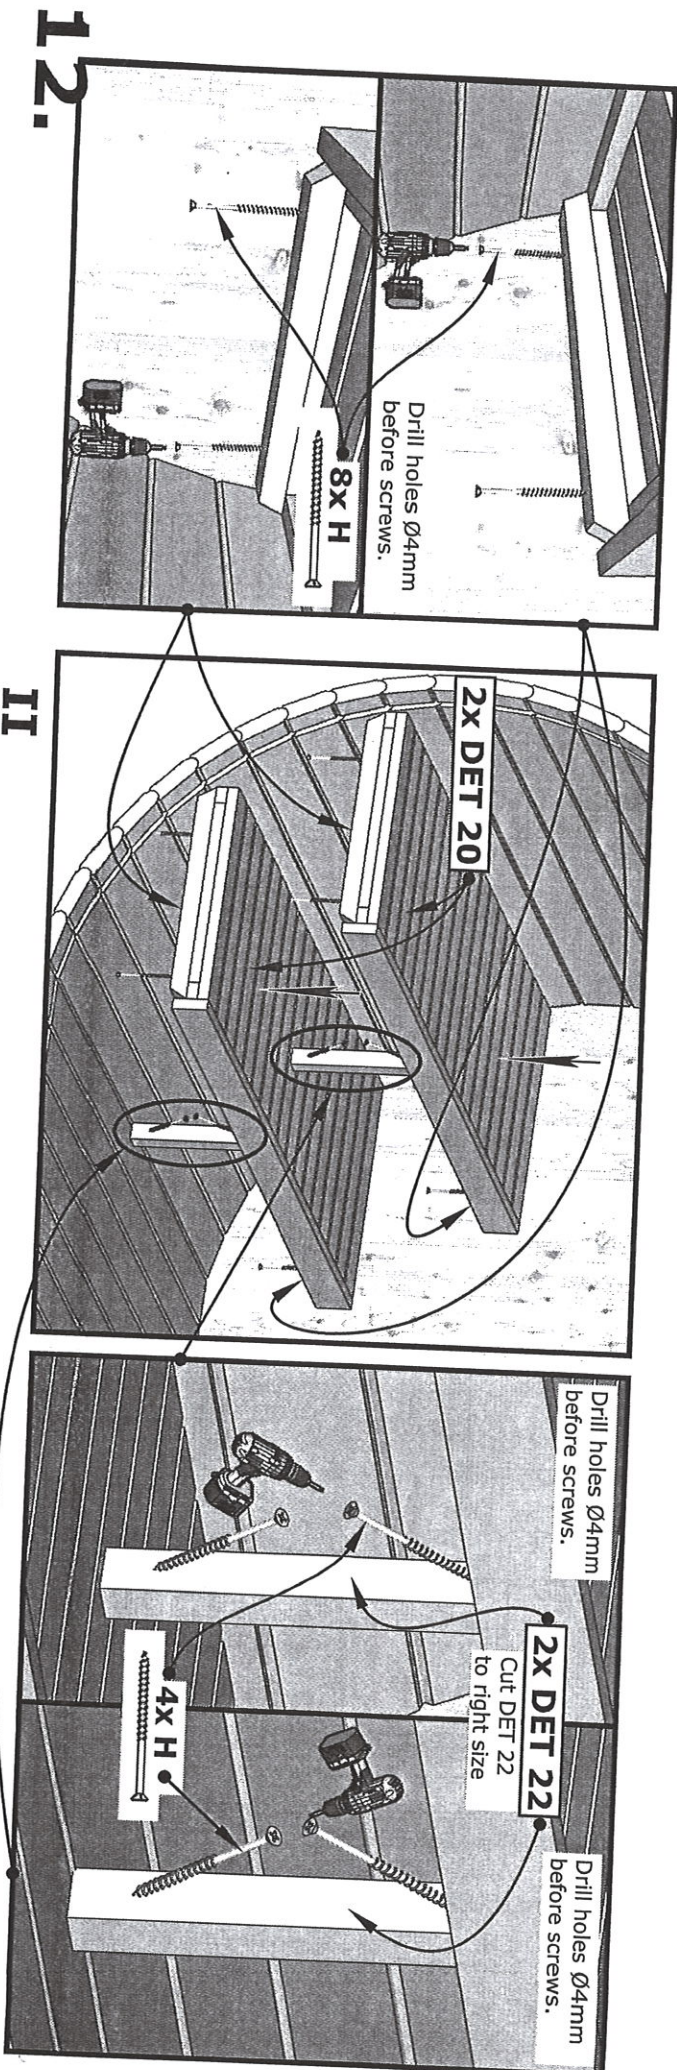
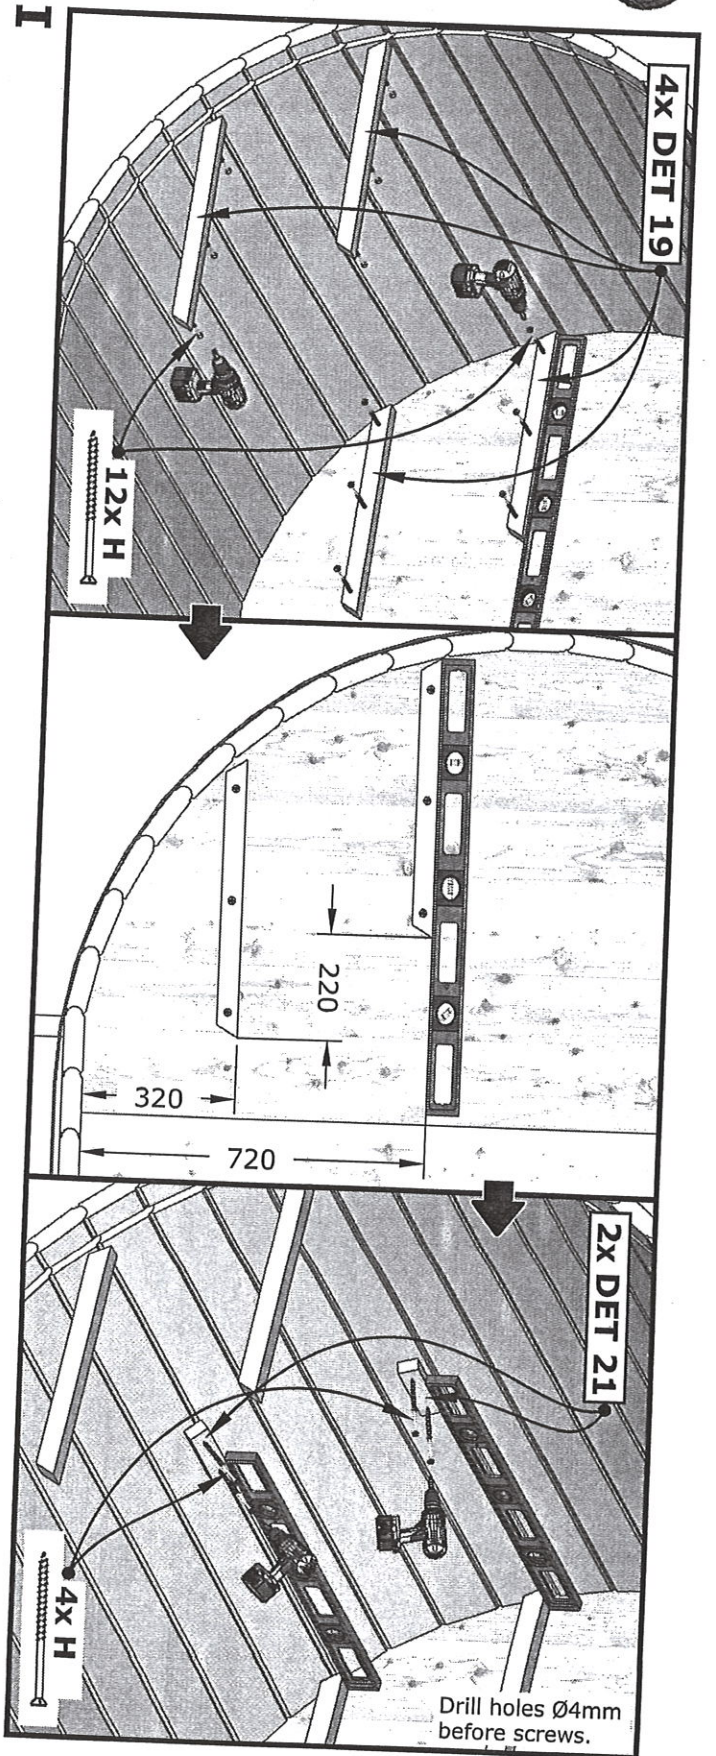
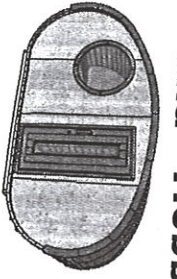


**12.**


**II**



# Sauna "Hobbit" 4 x 1,95

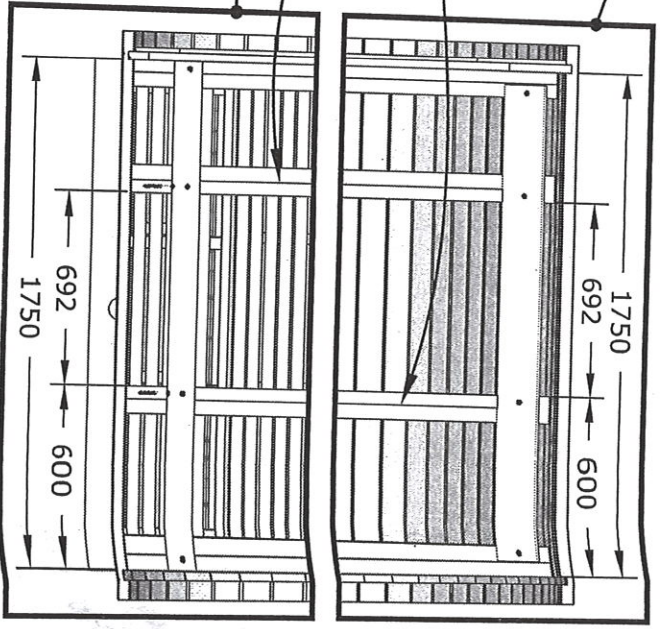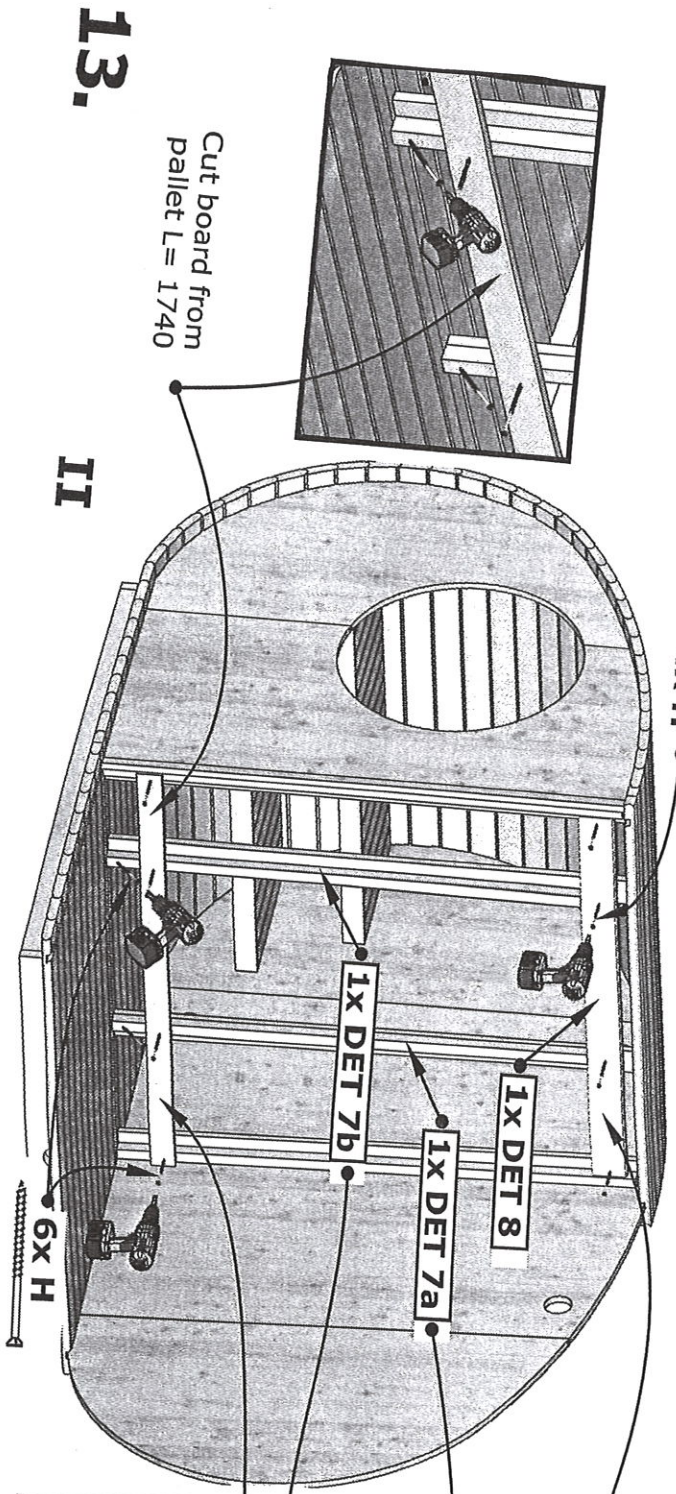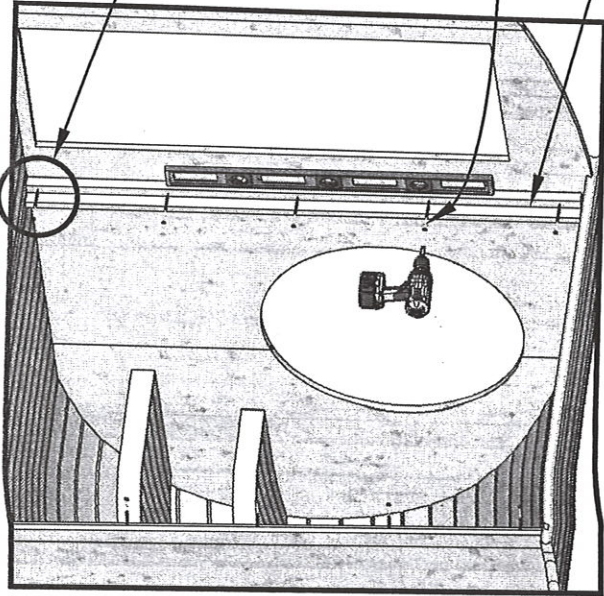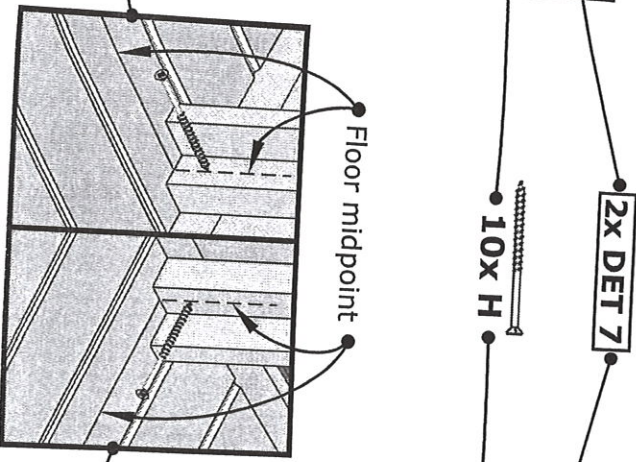
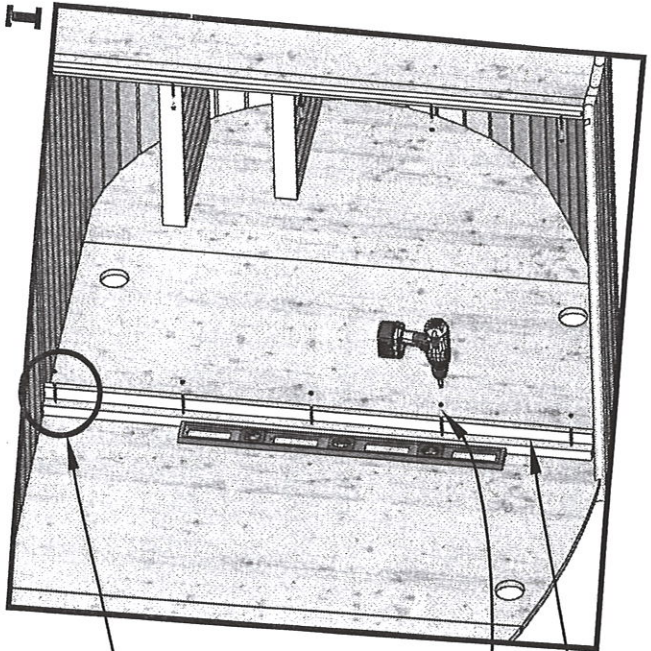


# Sauna "Hobbit" 4 x 1,95


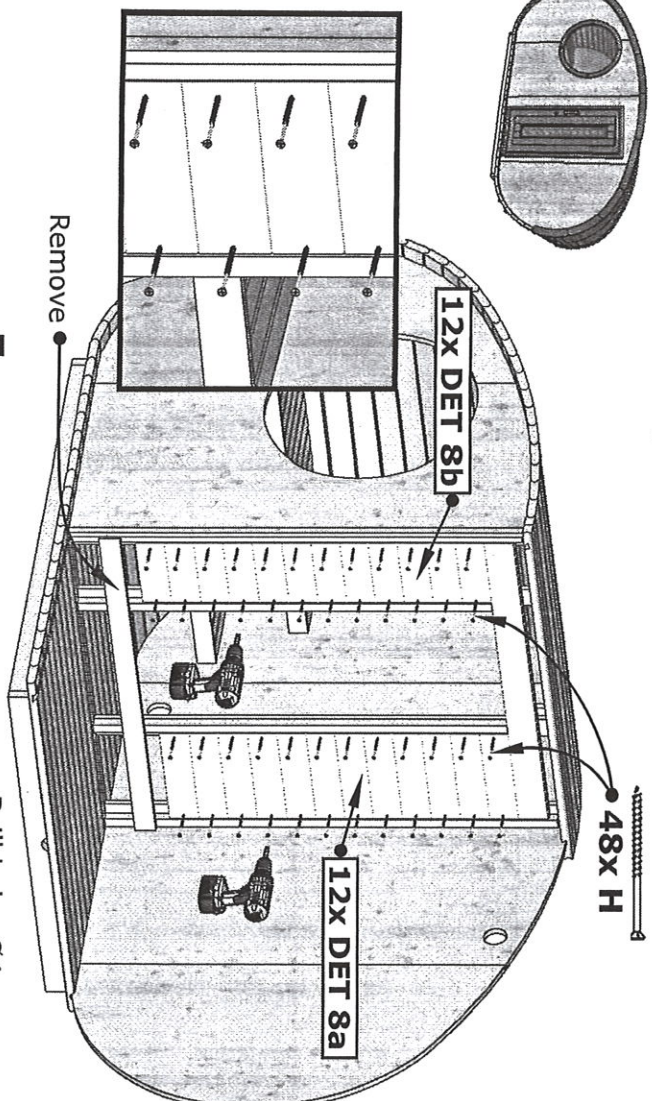


## I



Drill holes  $\varnothing 4\text{mm}$  before screws

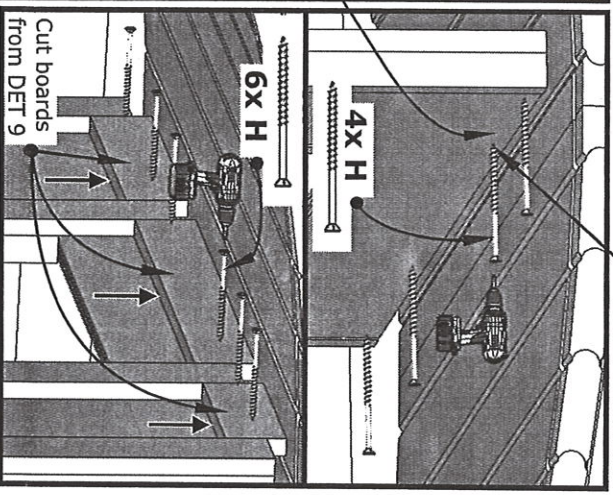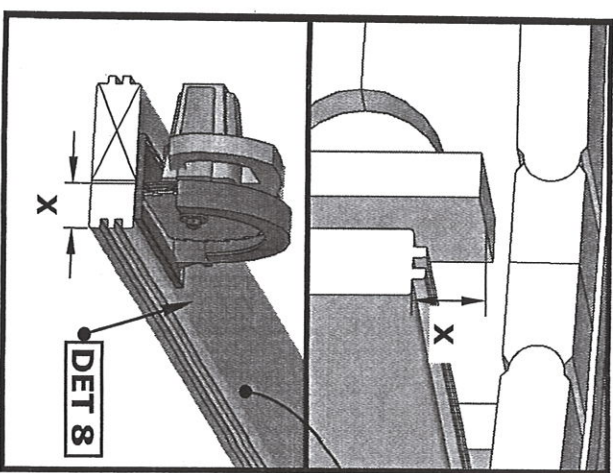

## II


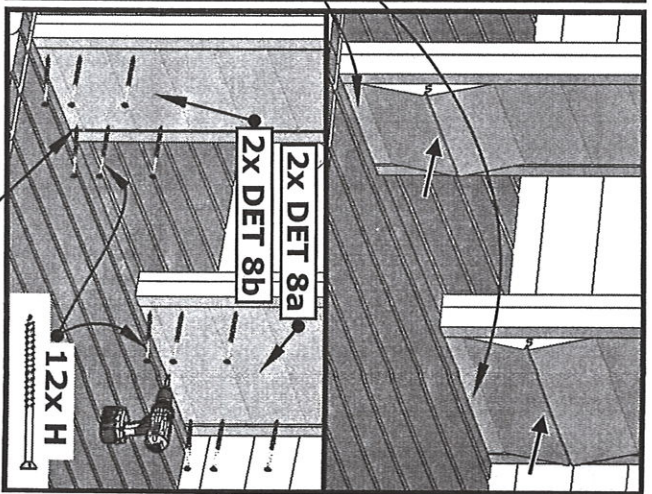
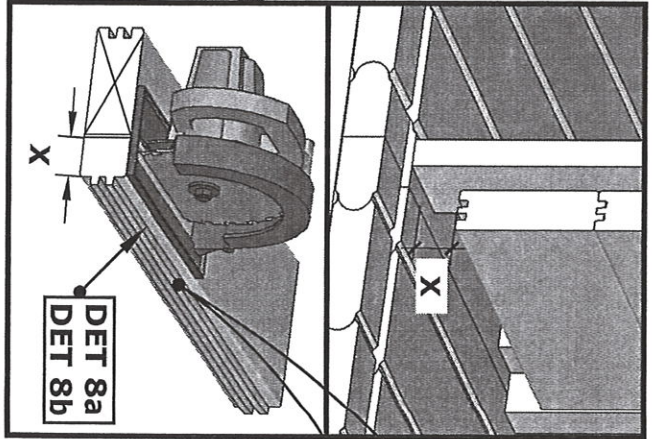


## IV

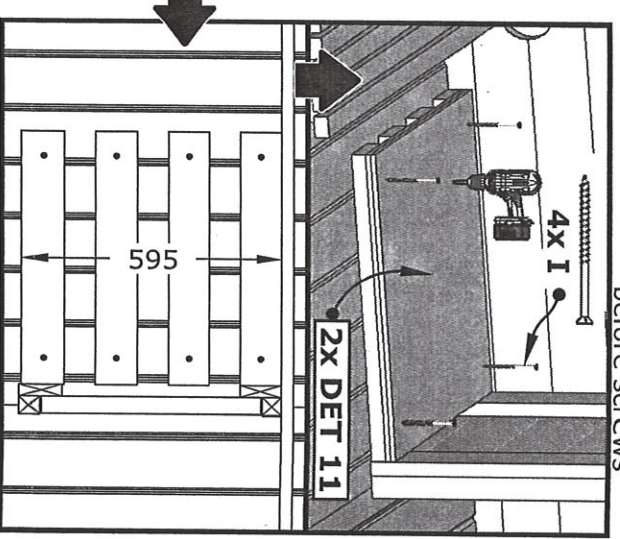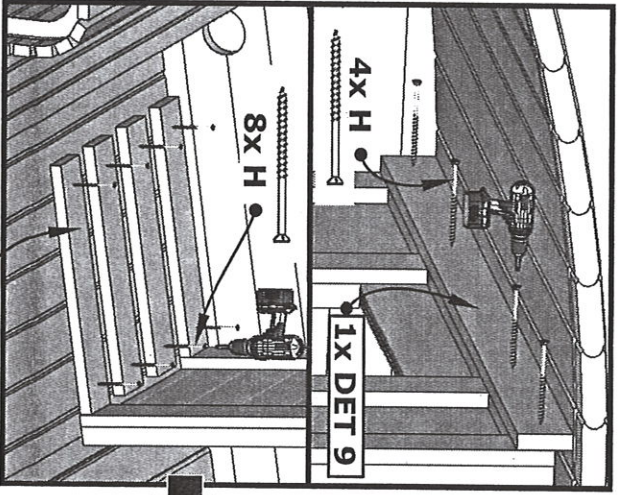









# 14. III

Sauna "Hobbit" 4 x 1,95

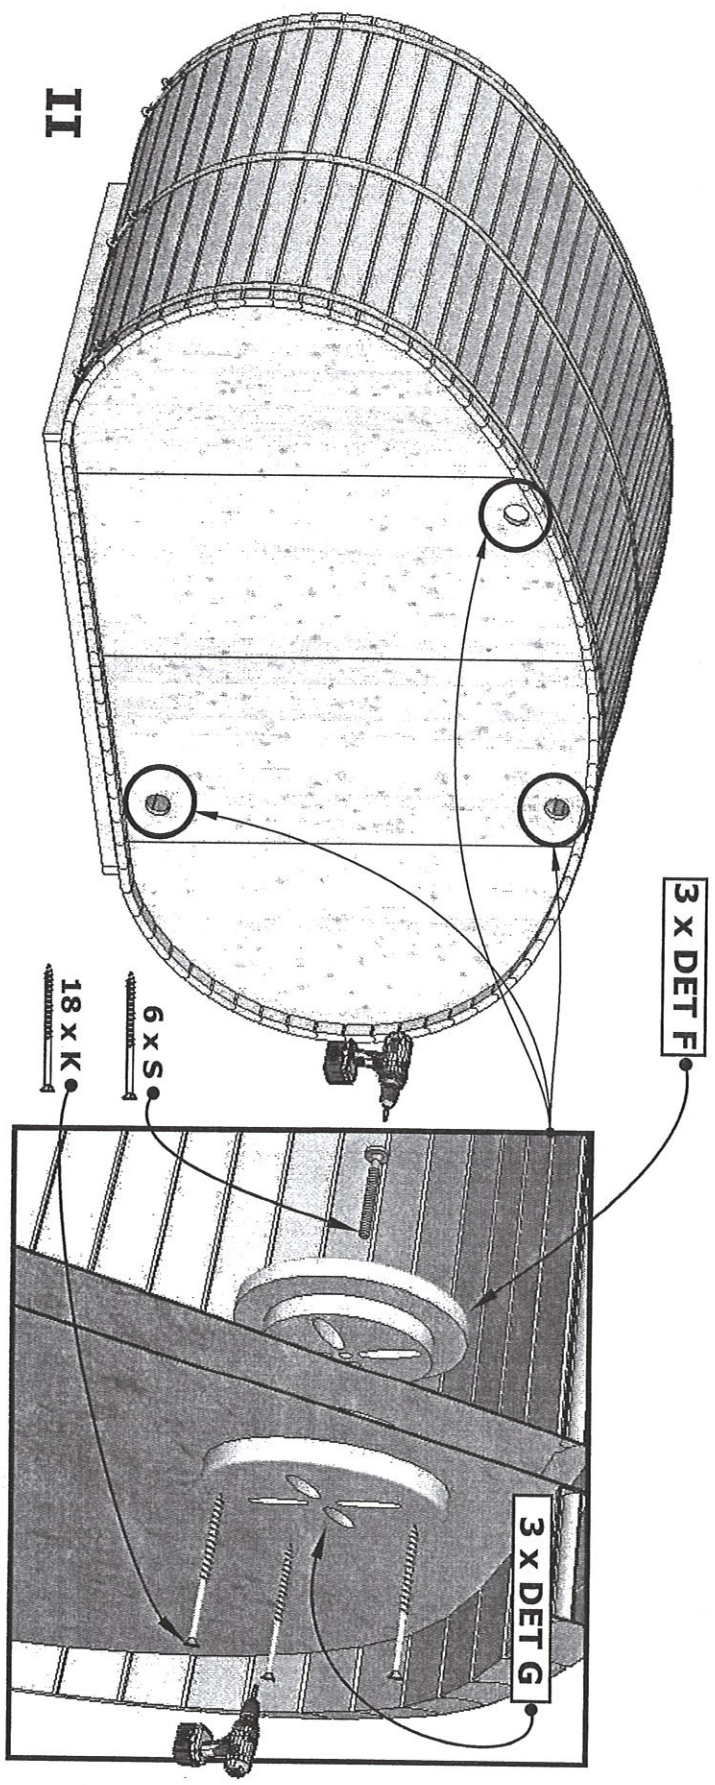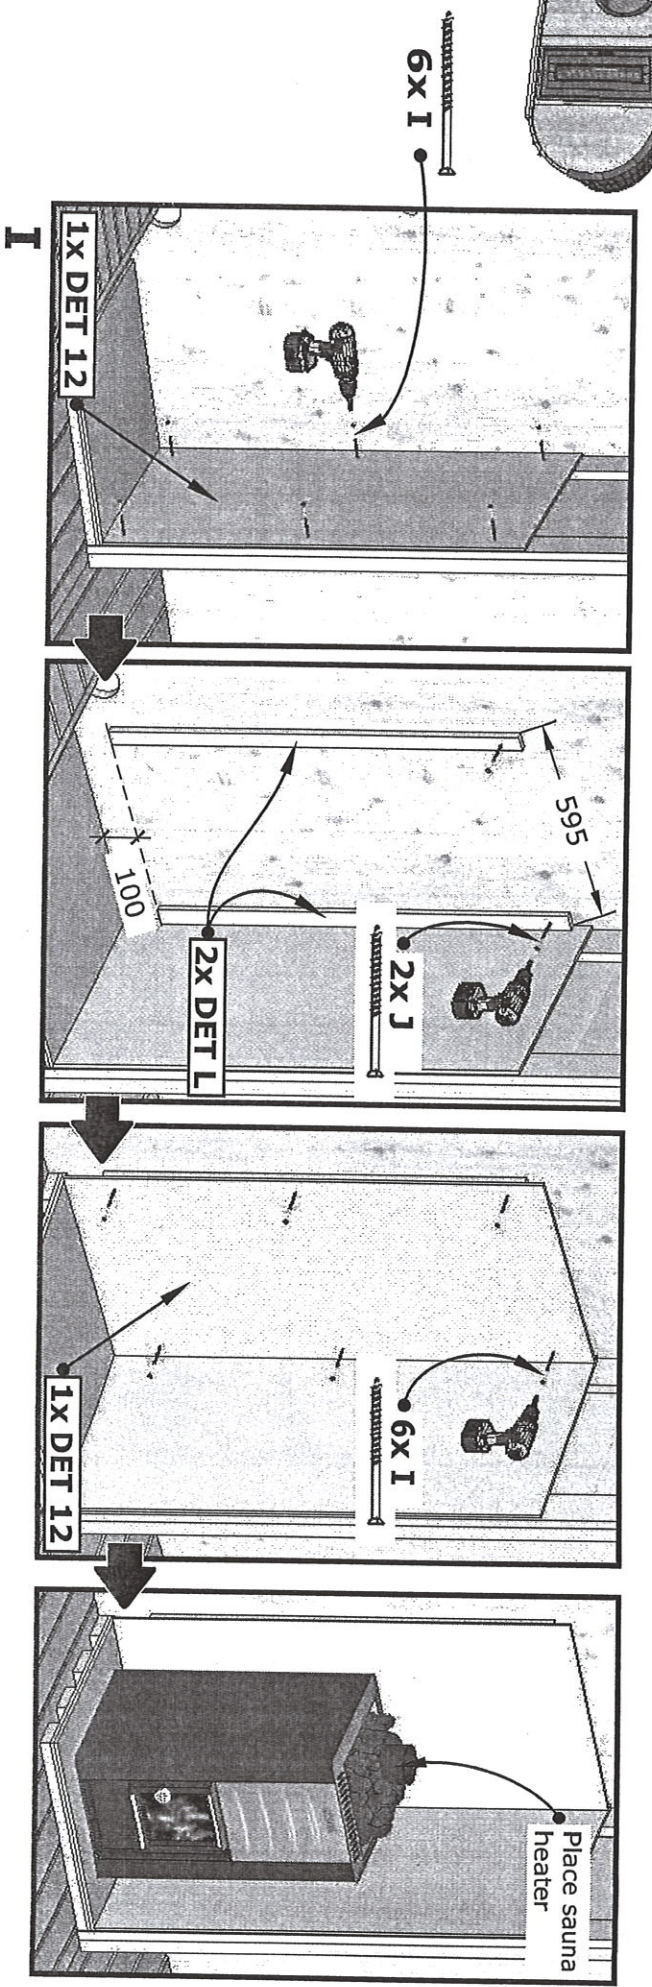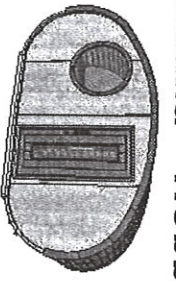





15. II

# Sauna "Hobbit" 4 x 1,95

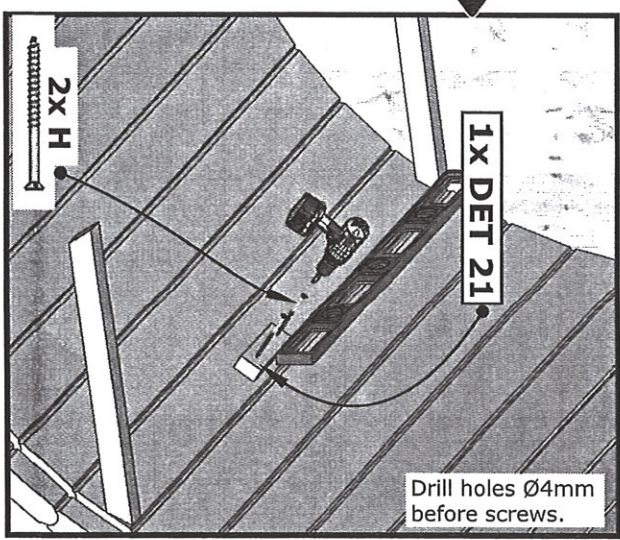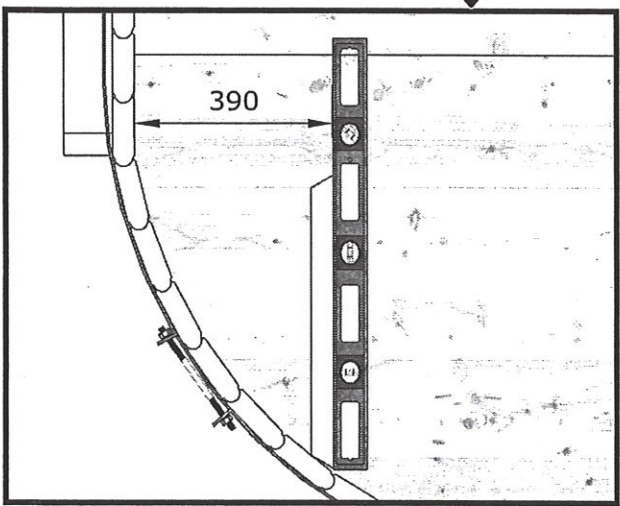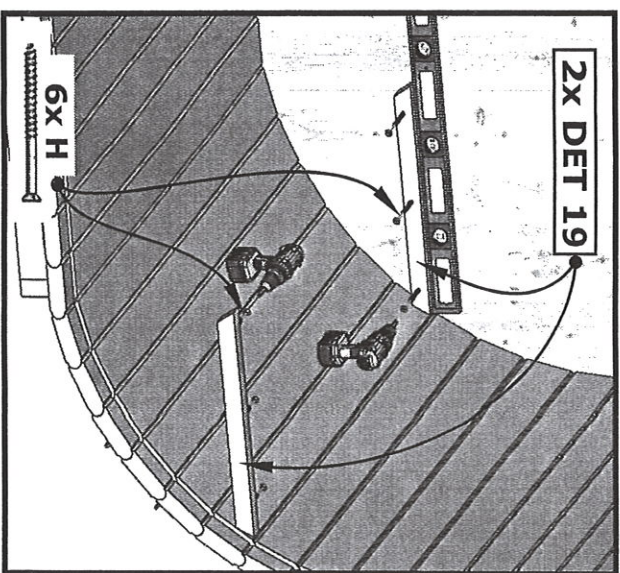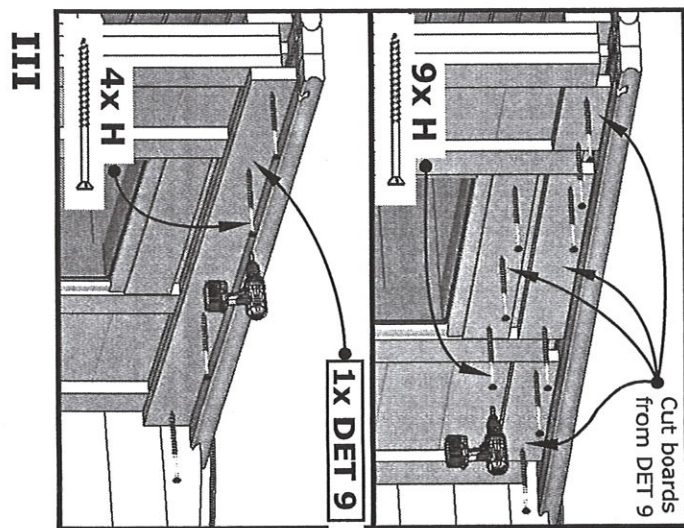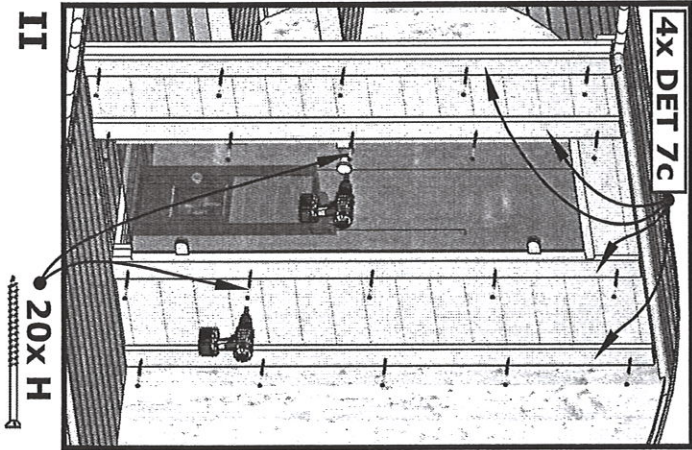
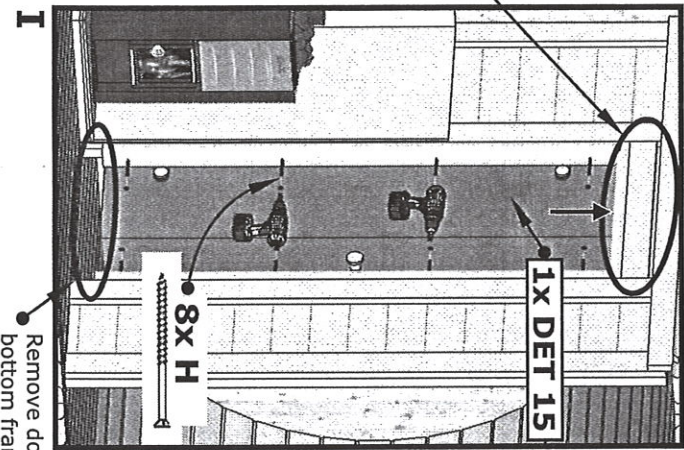
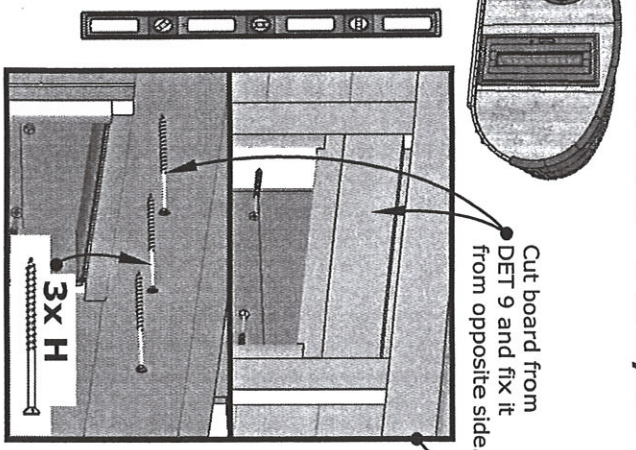
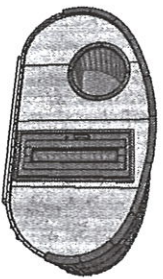


# 16. IV

# Sauna "Hobbit" 4 x 1,95

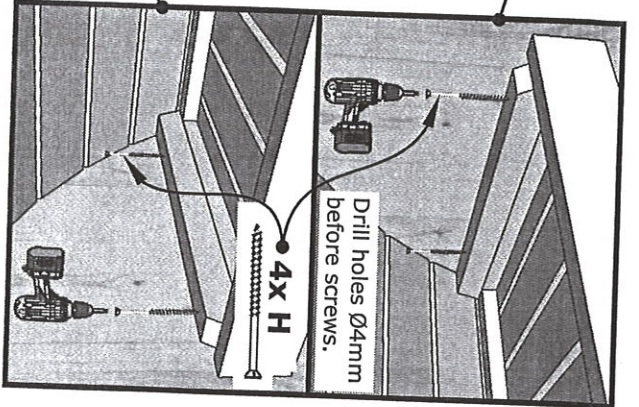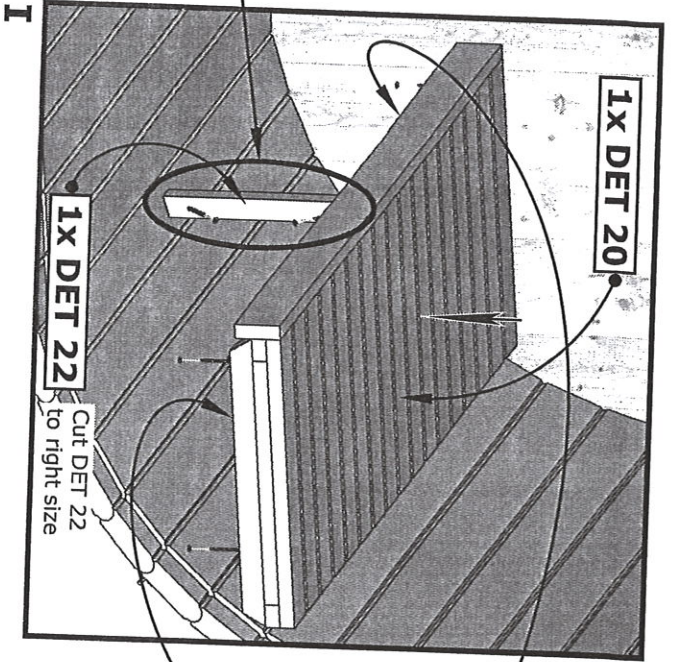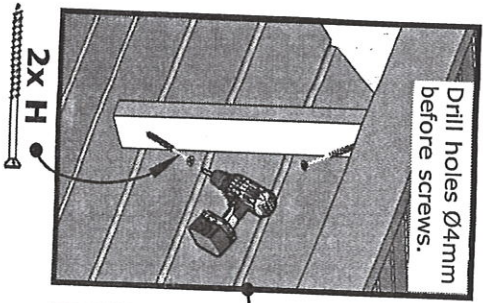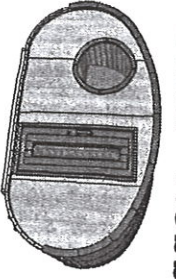


# Sauna "Hobbit" 4 x 1,95

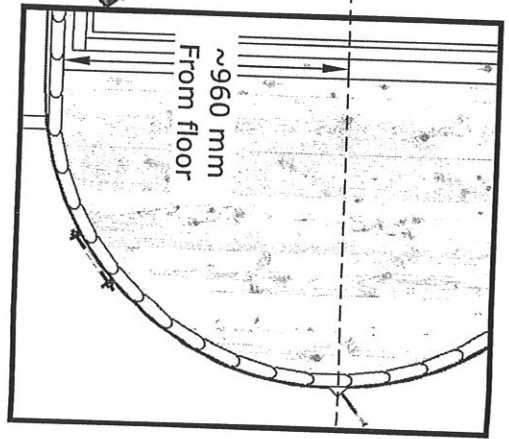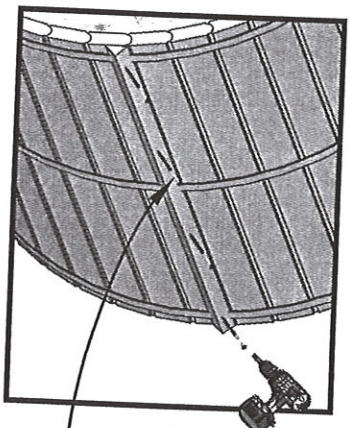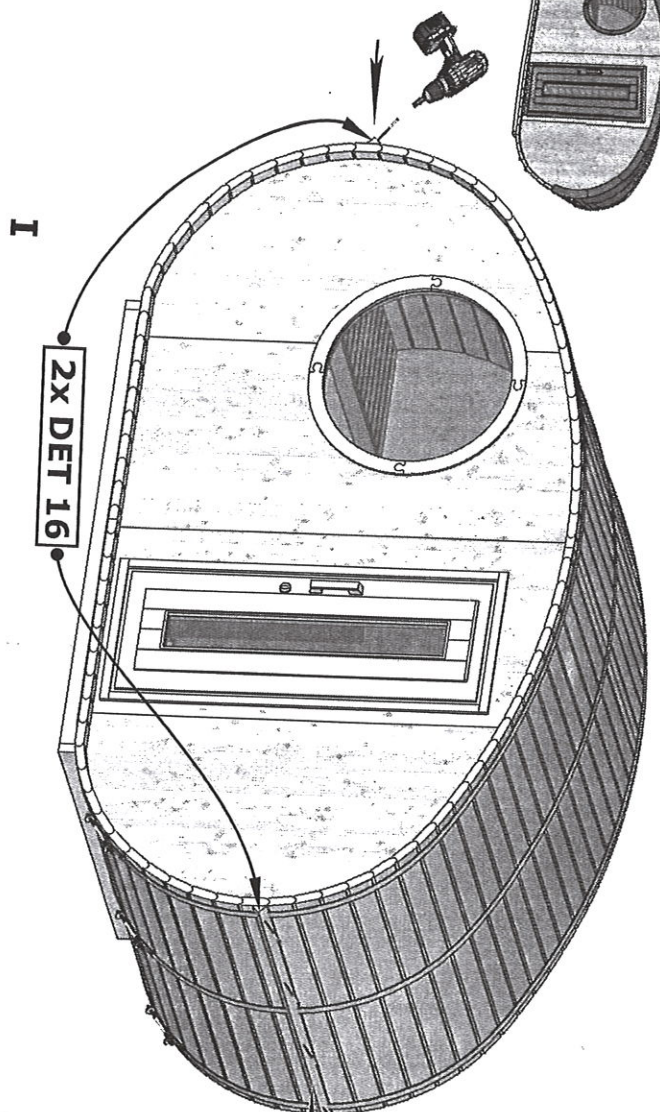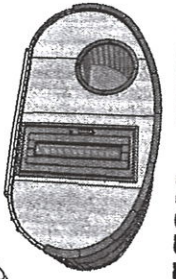


NB! Before roof shingles, install underlay felt.


Check also roof shingles installation manual inside package.

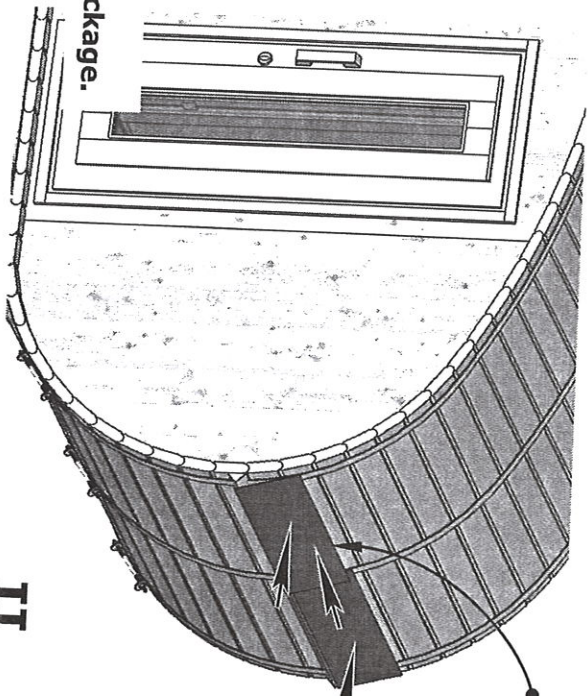


**II**

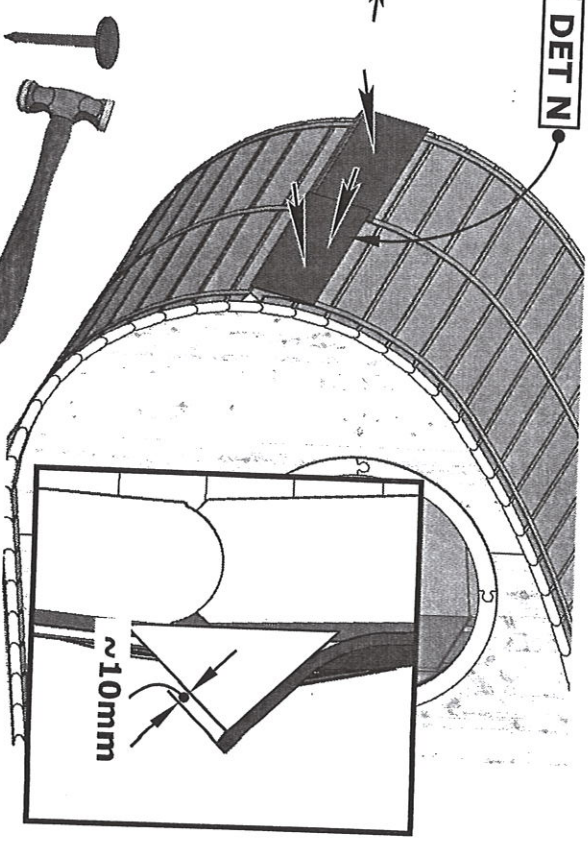



# Sauna "Hobbit" 4 x 1,95

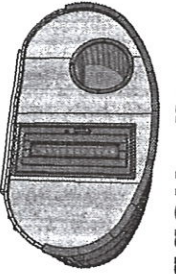

Shingles overlap on top

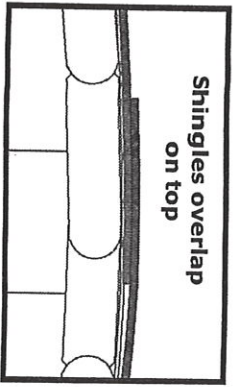



Check also roof shingles installation manual inside package.

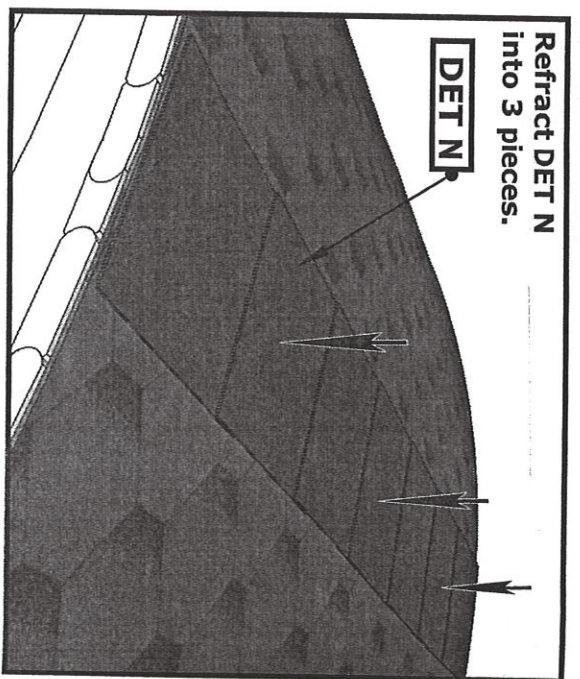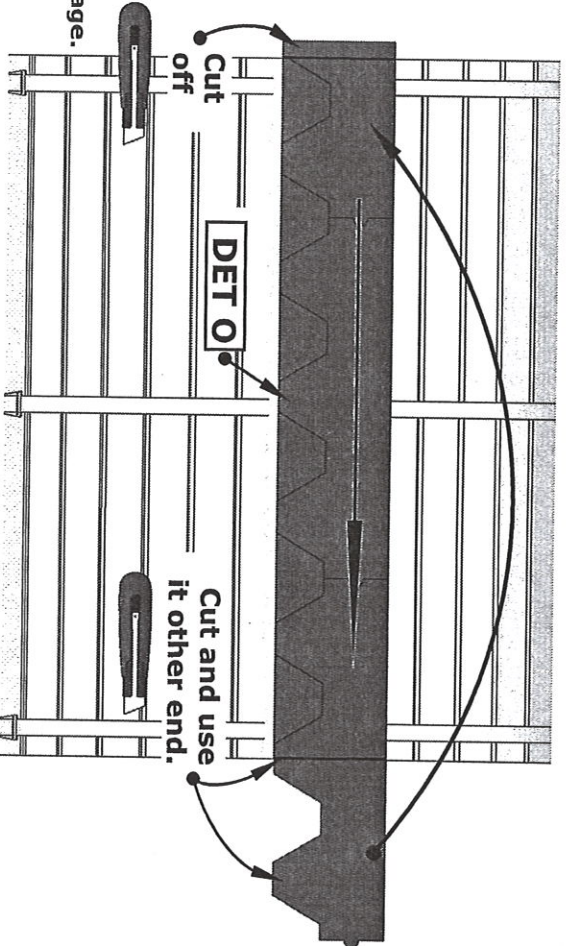


I

19.

III

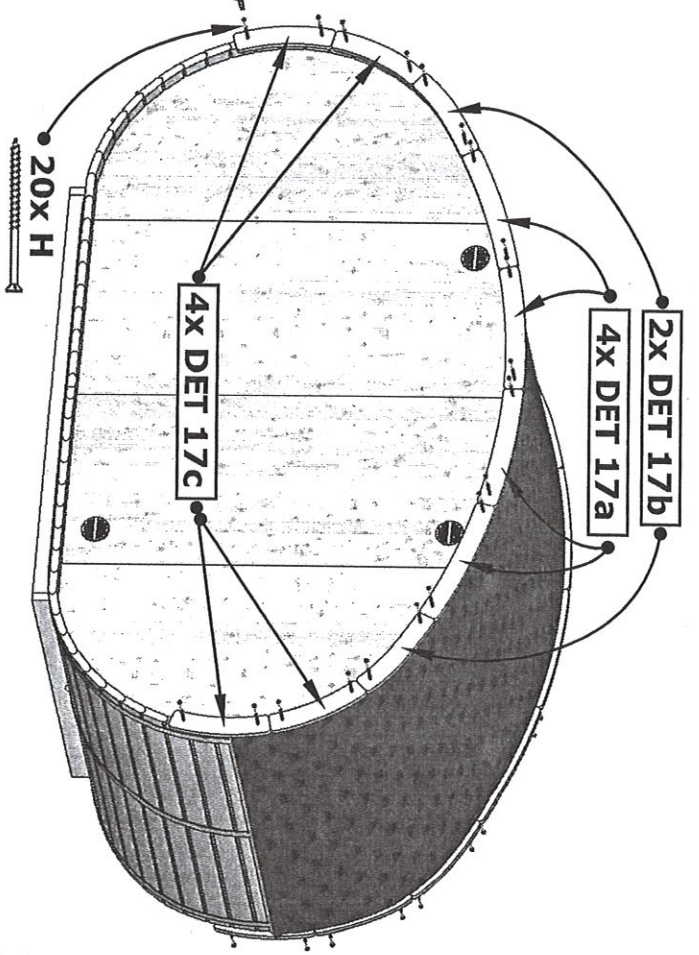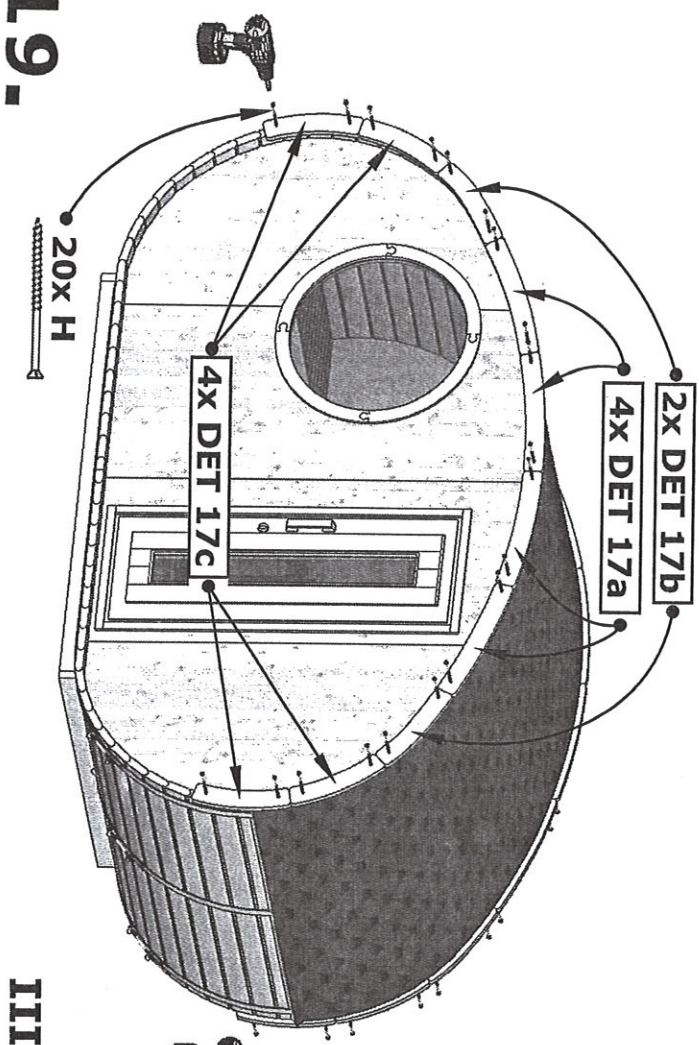


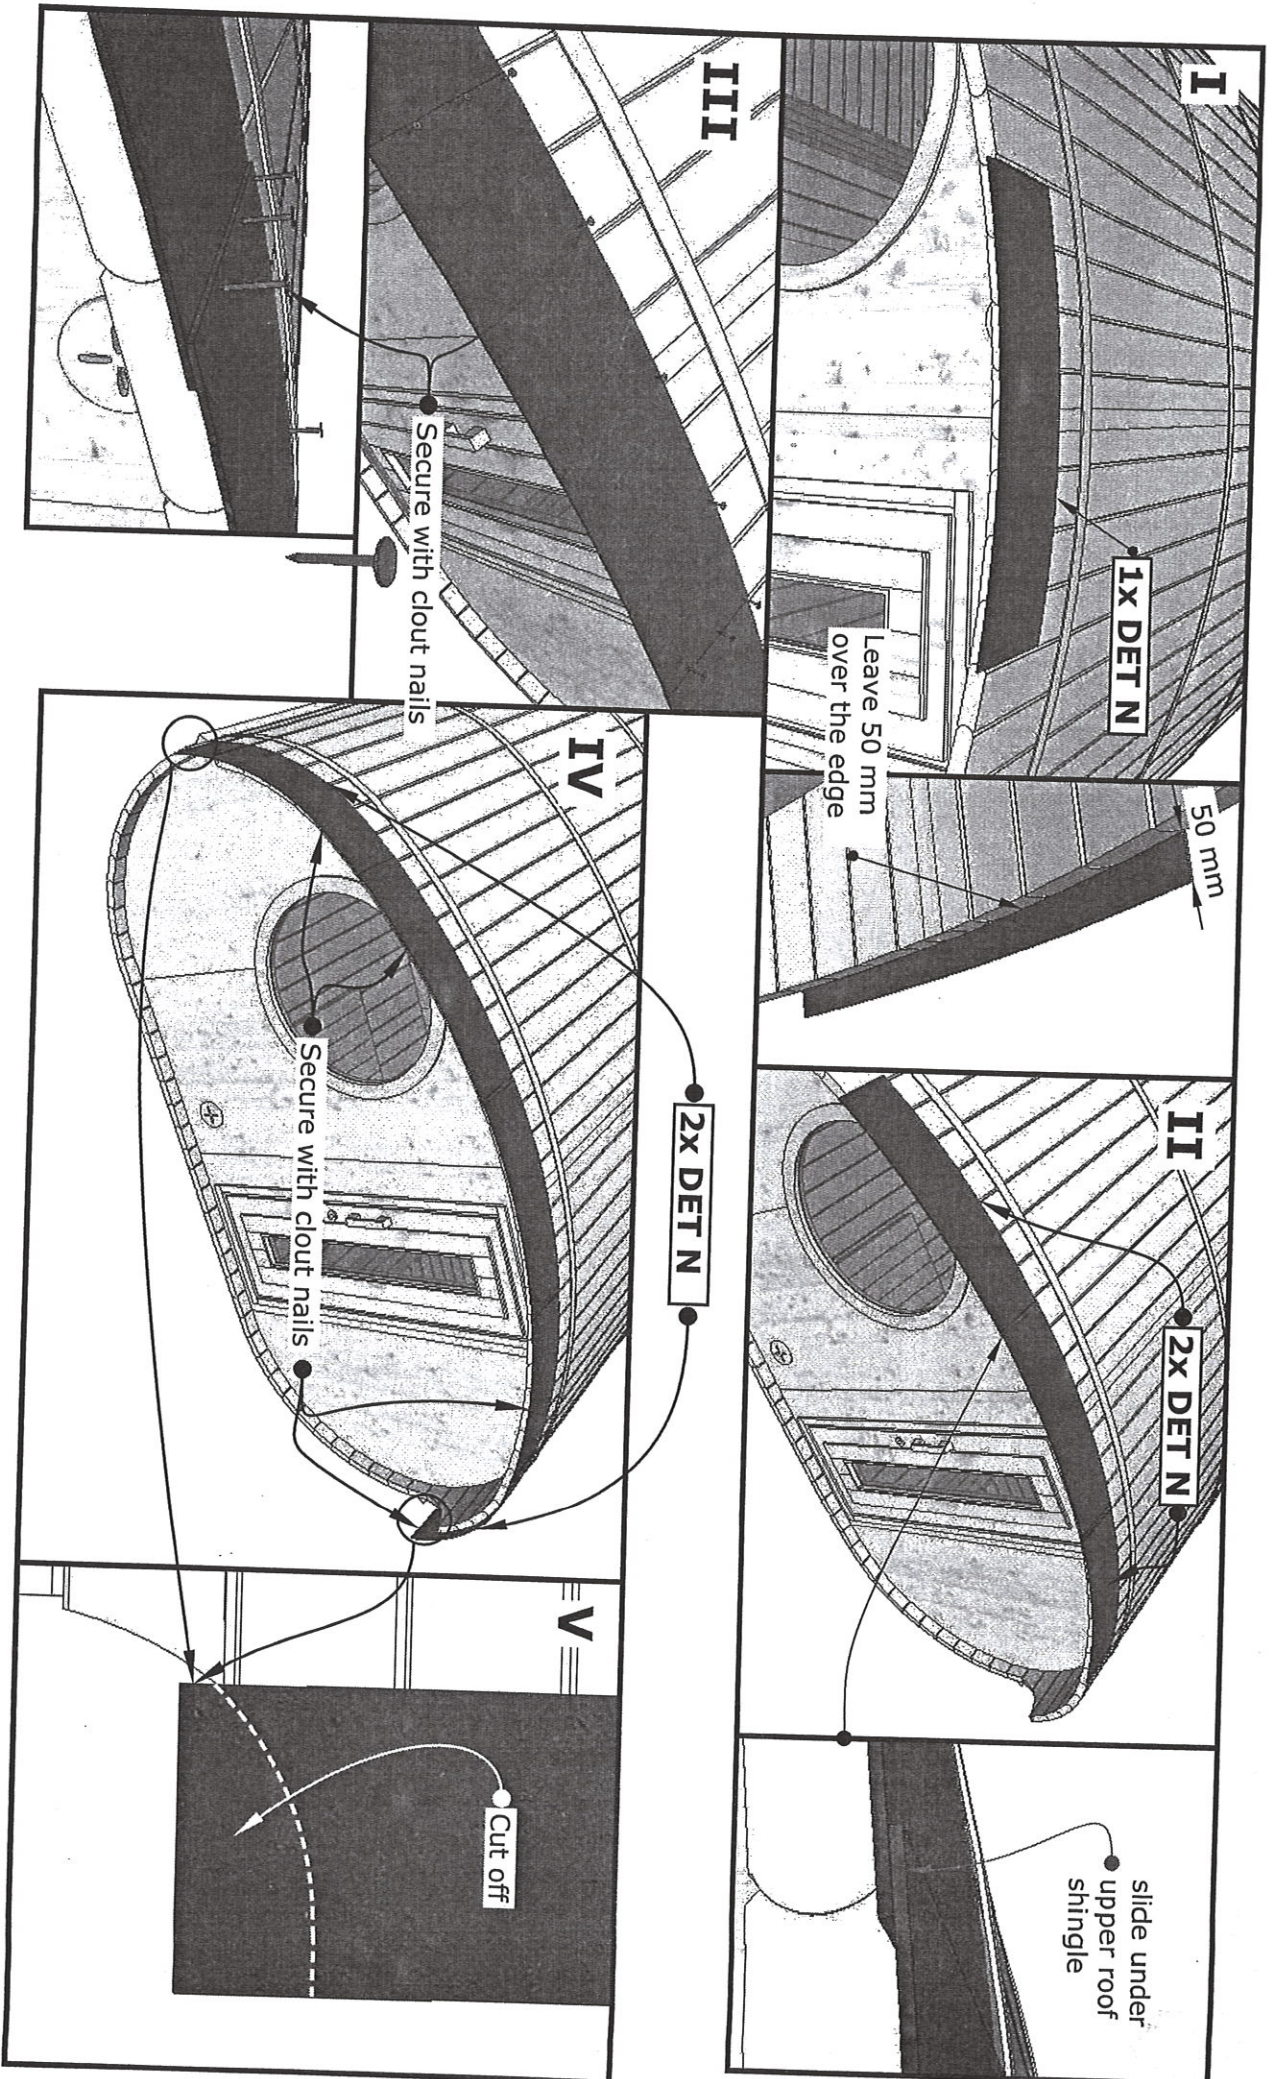


Ka.




I

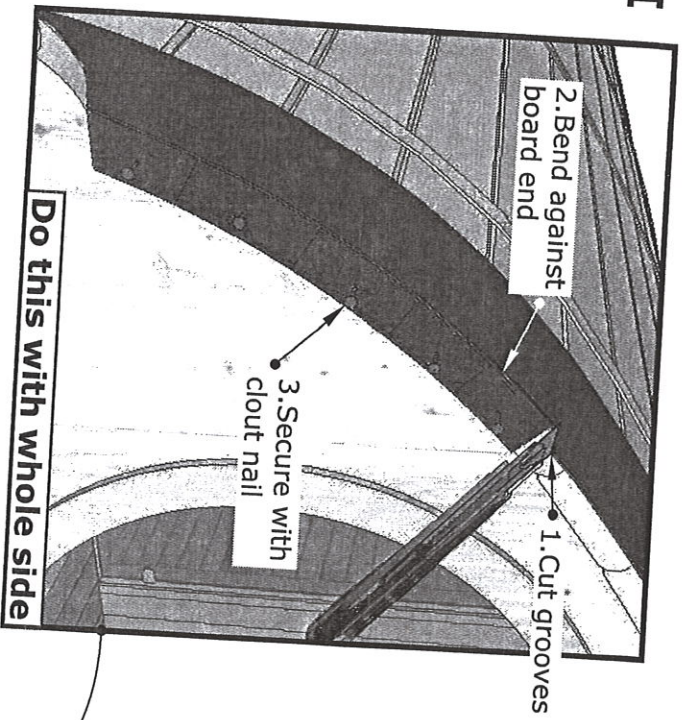


II

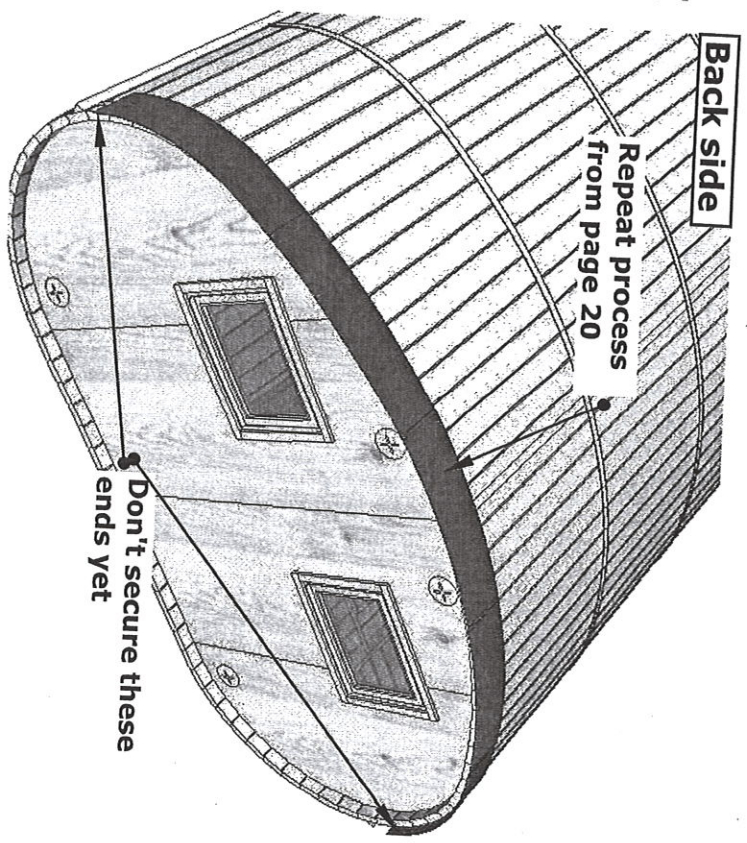

III

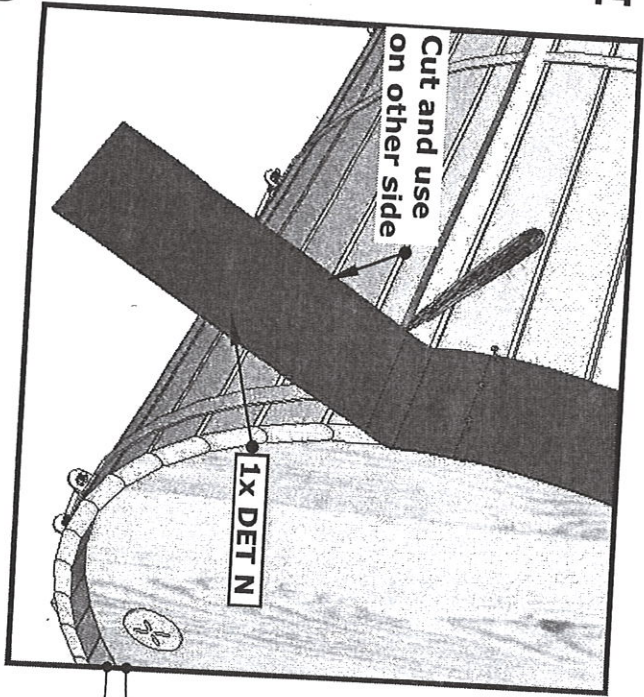

IV

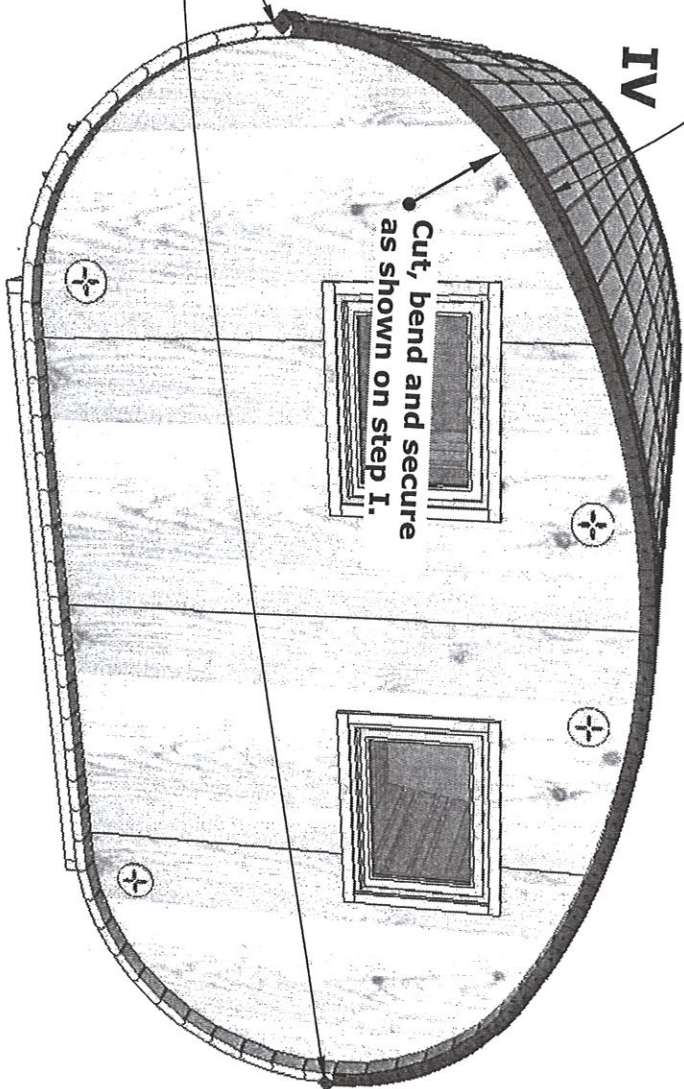

Kb.